

**S**YSTEM

**A**CCURATE

**M**ONITORING

**M**ANAGEMENT

**Reference guide**

**Version 8.1**

**CONTENTS**

---

**CONTENTS**

INTRODUCTION..... 5

    FOREWORD..... 5

    HOW TO CHOOSE AN OPTION IN SAMM..... 5

    ALT HOT KEY..... 5

    COMPUTER DATE ERROR..... 6

    OUT OF DISK SPACE WARNING..... 6

    OPERATOR ID WARNING..... 6

    BASIC CONFIGURATION..... 6

    INSTALL SAMM..... 6

    DEFINE MODEM FOR OUTGOING CALL..... 6

    GETTING STARTED..... 7

    HINT..... 7

F1 - ALARM MONITORING ..... 8

    DISPLAY DESCRIPTION..... 9

    ALARM MONITORING HELP MENU..... 11

    ALARM MONITORING HELP FUNCTIONS..... 11

        F1 SAVE EVENT..... 11

        F2 EVENT IN PEND..... 11

        F3 SITE PLAN / MISC..... 11

        F4 CCOUNT FILES..... 12

        F5 COMMENT / PASSCARD..... 12

        F6 LATE TO CLOSE / FOLLOW UP..... 12

        F7 PRIORITY ACTION DISPLAY..... 12

        F8 UTILITIES..... 13

        F9 LAST 10 EVENTS..... 13

        F10 MANUAL / AUTOMATIC TOGGLE..... 13

        Special event..... 14

        Work order..... 14

        Late closing..... 14

        Alarm code..... 14

        Deactivate an account..... 14

        Deactivate an alarm code..... 14

    CTRL S WORK ORDER..... 15

    CTRL V INACTIVE ACCOUNT..... 15

UTILITIES..... 15

    MEMO..... 16

    OPENING/CLOSING DELAY..... 17

    FIND ACCOUNT..... 18

    ACCOUNT EVENTS DISPLAY..... 18

    SET TIME..... 19

    ARMED/DISARMED SYSTEMS..... 20

    IDLE MODE..... 21

**CONTENTS**

---

F2 - ACCOUNTS MANAGEMENT.....	22
ADD.....	23
MODIFY .....	24
DELETE .....	24
CHANGE THE NUMBER.....	25
LISTS .....	26
DETAILED LIST OF ACCOUNTS.....	26
SUMMARY LIST OF ACCOUNTS.....	28
CALL-UP LIST .....	28
ADDRESS LABELS.....	28
USER LABELS.....	28
ACCOUNT PAGES DESCRIPTION.....	29
Page 1 : ACCOUNT INFORMATION.....	29
Page 2 : EMERGENCY TELEPHONE NUMBERS.....	29
Page 3 : RESPONSIBLE NOTIFICATION INFORMATION.....	30
Page 4 : ALARM CODES AND DESCRIPTION.....	30
SPECIAL ALARM CODES FOR RECEIVERS.....	33
Sescoa 3000R.....	33
Ademco.....	34
SurGard.....	36
Page 5 : WORK SCHEDULE.....	36
Page 6 : ID INFORMATION.....	39
Page 7 : ACCOUNT INSTALLATION INFORMATION .....	40
Page 8 : BILLING INFORMATION .....	41
Page 9 : DISPLAY ACCOUNT GROUPS .....	43
F3 - BILLING .....	44
ADDRESS LABELS.....	45
BILLING.....	46
BILLING SUMMARY.....	48
SUMMARY OF ALL PAYMENTS.....	48
SUMMARY OF ALL LAST PAYMENTS.....	48
F4 - SECURITY .....	49
OPERATOR'S MANAGEMENT .....	50
OPERATOR'S MESSAGE .....	51
SECURITY CONFIGURATION.....	51
F5 - HISTORIC MANAGEMENT.....	52
DELETE .....	53
LISTS OF EVENTS .....	54
VIEW.....	55
DATA TRANSFER.....	56
F6 - EXIT TO DOS.....	58

**CONTENTS**

---

F7 - PASSWORD.....	60
F8 - GENERAL INFORMATION.....	62
ALARM MONITORING INFORMATION.....	63
BILLING INFORMATION.....	65
BILLING DESCRIPTION.....	65
GROUP MANAGEMENT.....	66
ADD GROUP.....	66
MODIFY GROUP.....	67
AUTO WORK SCHEDULE.....	67
DELETE GROUP.....	68
DISPLAY GROUP.....	69
PRINT GROUPS.....	69
ADD OR MODIFY A CITY.....	69
ALARM COMPANIES MAINTENANCE.....	70
APPENDIXES.....	72
APPENDIX A --- RECEIVERS.....	73
Sescoa 3000R.....	73
Ademco 685.....	74
SurGard D-VAC & DIGITAL.....	75
Heartbeat of the receiver.....	76
Heartbeat of SAMM.....	76
APPENDIX B --- TEXT EDITOR.....	77
APPENDIX C --- MESSAGES FROM SAMM.....	79
APPENDIX D --- SUMMARY OF COMMANDS.....	81
APPENDIX E --- DATABASE.....	82
APPENDIX F --- WAITING FILE.....	84
APPENDIX G --- REPORT SAMPLES.....	85
APPENDIX H --- RUNTIME ERRORS.....	95
APPENDIX I --- SAMM UTILITY TOOLS.....	96

**INTRODUCTION**

**FOREWORD**

SAMM is a powerful yet very easy to use software application. Following is a list of its major assets:

- event processing directly from the receiver.
- linked to 1 (one) or more receiver types simultaneously.
- multiple report formats.
- protection illegal opening.
- unlimited number of customers.
- text editor.
- flexible database.
- multi-user.
- 5 working schedules.
- opening/closing control with a variable delay.
- events priority
- customer groups (index)
- automatic billing.
- Memo
- Data transfer to a remote Central
- etc.

This manual should be read to grasp the general concept of the system before attempting to put it into operation.

**HOW TO CHOOSE AN OPTION IN SAMM**

There are (2) two ways to choose an option in SAMM's menus:

1. press the key corresponding to the chosen option (F1,... F9, 1, 2, ... 5)

OR

2. with one of the arrow key, move the video inverted bar over the option and press <ENTER>.

Special options, if available, are displayed in the lower part of each displayed windows.

Example: <ESC> To Exit <F1> For Delay

**ALT HOT KEY**

Whatever is being done in the system, PRESSING AND HOLDING the ALT key will display the last 15 events received by the computer. Releasing the key will return the system to what it was doing before the interruption.

Account	Time	Code	Definition
1234	12:38	31	Front door
2241	12:42	41	Opening by Alex Rosse
.....	.....	....	.....

---

## **INTRODUCTION**

### **COMPUTER DATE ERROR**

From version 8.1.16 upward SAMM checks date differences from last observed date in Computer and displays a warning with option for operator to change System date.

**SYSTEM DATE MISMATCH, VERIFY PLEASE YY/MM/DD**

As a safety measure, previous versions cause a lockup upon detecting a date difference. This new feature requires utmost attention from operator when this message is displayed. System date error may cause liabilities if security events are logged with wrong date.

### **OUT OF DISK SPACE WARNING**

SAMM systematically checks the disk space available to receive and store data. When the level of availability is lower than one (1) megabyte, a warning is issued, every fifteen minute, to the operator. This tells him the emergency to clean up and create available working space.

### **OPERATOR ID WARNING**

Every fifteen minute, a large display gives the actual operator number. This insures that the right person is operating the system and receiving the messages.

### **BASIC CONFIGURATION**

The minimum configuration for SAMM is a 80286 micro-processor with 640K of RAM, a 40 Mb hard disk, one parallel port, 2 (two) or 3 (three) serial ports and MS-DOS version 3.x or higher.

### **INSTALL SAMM**

To install SAMM, insert the diskette in slot A or B, close the door and enter the commands:

```
A: <ENTER> (or B)
INSTALL <ENTER>
```

### **DEFINE MODEM FOR OUTGOING CALLS**

In the same string used to start SAMM, see next paragraph Getting Started, use an Mx (x=1 to 9) parameter at the COM location. The "x" following the M specifies delay in seconds for SAMM to hold the modem until the operator picks up the phone.

Example: A TLR receiver is installed on COM3, IRQ5, a Modem is on COM2 and a delay is 5 seconds.  
(space X space) means step over COM1 where no receiver is installed.  
M5,means a Modem is installed in position 2

**SAMM X M5 5,7,N,N,0**

A TLR receiver is installed on COM1, IRQ5, a Modem is on COM 3 and a delay is 9 seconds.  
(space X space) means step over COM2 where no receiver is installed.  
M9,means a Modem is installed in position 3

**SAMM 5,7,N,N,0 X M9**


**INTRODUCTION**

**GETTING STARTED**

Starting SAMM: Without receiver, key in: SAMM and press <ENTER>.

With receiver, key in: SAMM followed by spacers for unused COM then key in:

	(COM1)	(COM2)	(COM3)	(COM4)
SAMM	4, 4, N, N, 0	X, X, X, X, X	X, X, X, X, X	X, X, X, X, X

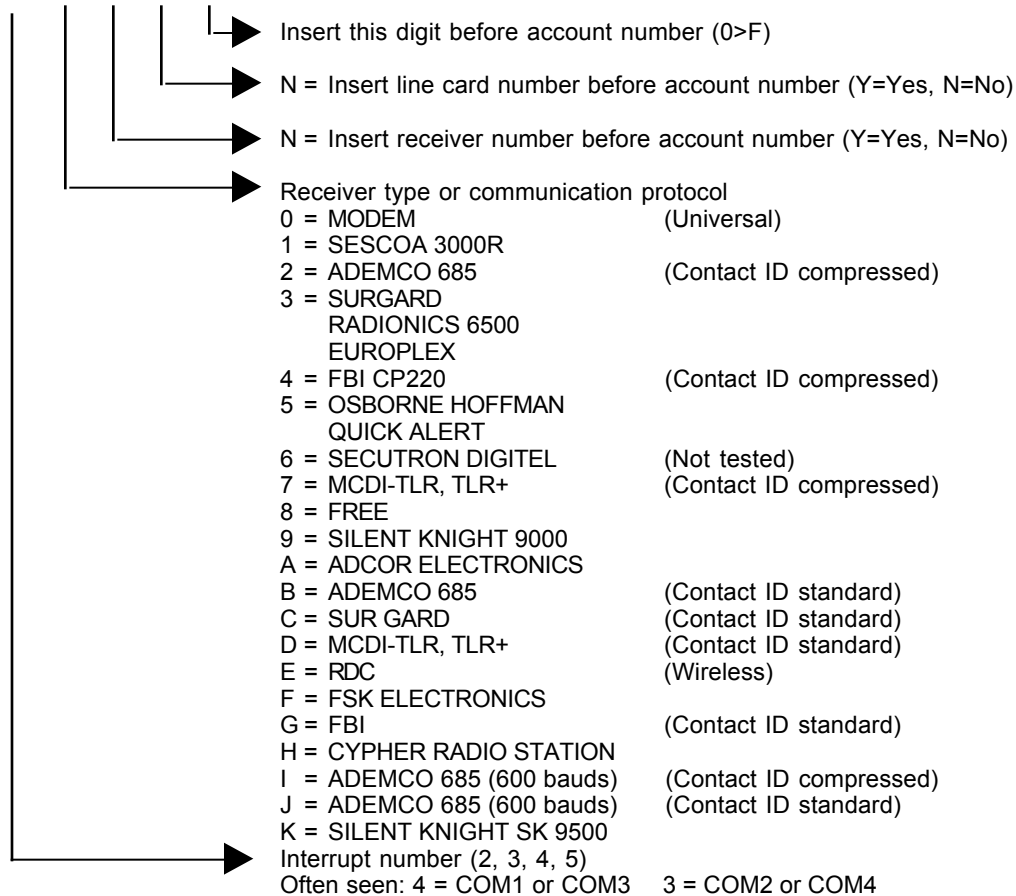

Example: Receiving account 1234, on COM3, IRQ4, ADEMCO 685 on line (5). Spacer for unused COM ( X X )

Enter :	SAMM X X 4,2,N,0,8	Result: account number	851234	(COM1, COM2 bypass by X X)
	SAMM X X 4,2,Y,N,0		11234	(COM1, COM2 bypass by X X)
	SAMM X X 4,2,N,N,0		1234	(COM1, COM2 bypass by X X)
	SAMM X X 4,2,Y,Y,0		151234	(COM1, COM2 bypass by X X)

**HINT**

Putting the starting command in a "BATCH" file will be very helpful.

Example: To create a "BATCH" file, enter these commands:

```

COPY CON GO.BAT <ENTER>
SAMM X X a,b,c,d,e <ENTER> (personalized configuration. receiver on COM3)
<CTRL Z> <ENTER>
  
```

Next enter GO <ENTER>; to start, enter SAMM with the required parameters.

**F1 - ALARM MONITORING**


<b>SAMM</b>		
<b>F1</b>	<b>-</b>	<b>ALARM MONITORING</b>
<b>F2</b>	<b>-</b>	<b>ACCOUNTS MANAGEMENT</b>
<b>F3</b>	<b>-</b>	<b>BILLING</b>
<b>F4</b>	<b>-</b>	<b>SECURITY</b>
<b>F5</b>	<b>-</b>	<b>HISTORIC MANAGEMENT</b>
<b>F6</b>	<b>-</b>	<b>EXIT TO DOS</b>
<b>F7</b>	<b>-</b>	<b>PASSWORD</b>
<b>F8</b>	<b>-</b>	<b>GENERAL INFORMATION</b>

**ALARM MONITORING**

**F1 - ALARM MONITORING**

The ALARM MONITORING module is the basic element of SAMM. It allows the management of all events entering a Central Station. Utilities and many type of menus ease the task of alarm monitoring.

The HOT key is <F1>. Wherever the operator is in SAMM hitting this key will bring back the ALARM MONITORING menu.

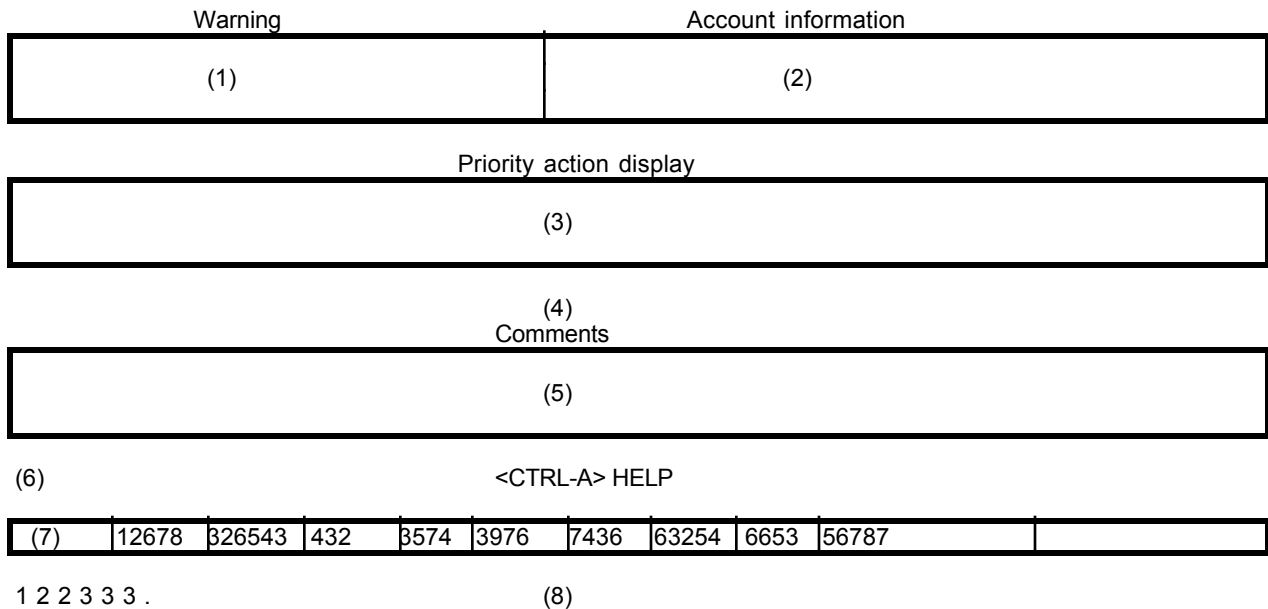

**DISPLAY DESCRIPTION**

(1) - WARNING

Used to display special information in customer file.

(2) - ACCOUNT INFORMATION

Customer number, name, address, city, province/state, postal/zip code, alarm system status.

(3) - PRIORITY ACTION DISPLAY, ENTERING EXPIRATION DATE AND TIME

When an event occurs, a step by step procedure to follow is displayed. If the event concerns an Opening or a Closing, the work schedule is displayed.

(4) - EVENTS

The alarm code received and its meaning.

**ALARM MONITORING**

(5) - COMMENTS EDITION

Three lines are open to write comments related to the event being processed.

(6) - ERROR MESSAGES

At all time the : "<CTRL-A> HELP" message is displayed in the lower part of the screen. Press (CTRL-A) to get help regarding ALARM MONITORING.

When an event is being processed, this line is also used to display the installer name for this customer. Pay a special attention to the beep sound. Each time it sounds twice an error message is being displayed (see ERROR MESSAGES in the APPENDIX section).

(7) - PEND.

Account number display for whom the processing of an event was interrupted and is waiting to resume. PEND. is the PENDING FILE.

(8) - WAITING FILE

Events having been received and awaiting processing (See a detailed description in the APPENDIX section).

Here is an example of an event being displayed for alarm monitoring. All pertinent details required for the step by step procedure are available for immediate action.

A beep sound signals to the operator that an event has been received. The beep increases its beat as seconds go by without intervention until it becomes a continuous sound. Hitting any key will stop the sound.

Warning	Account information
Crossroad: BURNS ST	12647 armed SECURITY INC. 1575, BLAIR ST OTTAWA, (ONTARIO)
Priority action display	
Phone number of the premises	444-4444
Police	911
Allan Phillips Owner	666-6666
SAVE EVENT	
31 > Break in front door	
Date : 96-03-05	-COMMENTS- Time : 10:41:50
Customer ask to explain keyboard functions	
<CTL A> - HELP	
PEND.	

ALARM MONITORING HELP MENU

COMMANDS SUMMARY		
F1	-->	Save event
F2	-->	Event in PEND.
F3	-->	Site plan/Misc
F4	-->	Account files
F5	-->	Comments/Passcard
F6	-->	Late to close/Follow up
F7	-->	Priority action display
F8	-->	Utilities
F9	-->	Last 10 events
F10	-->	Manual/automatic toggle
CTRL-S	-->	Work order
CTRL-V	-->	Inactive Account

ALARM MONITORING HELP FUNCTIONS

F1 SAVE EVENT <F1> or <F7>, bring cursor to last line and press <Enter>

This command saves all events on disk allowing future reporting to customers (See PRINTING MANAGEMENT).

It is compulsory to END PROCESSING in this way to finalize the operation.

F2 EVENT IN PEND. <F2>

This command puts an event being processed into the PEND. file for ulterior intervention. The PEND. is at the bottom of the display and can hold up to 10 awaiting events. Each event in the PEND. holds its customer number. When the PEND. is empty, the word PEND. is displayed. An attempt to put more than 10 event in the PEND. is met by a beep, meaning refusal. The event has to be processed.

This command is also used to fetch an event from the PEND. for processing. To choose an event in the PEND., use the arrow key to bring the cursor on the customer number and press <ENTER>.

F3 SITE PLAN / MISC <F3>

This function displays the drawings and specifications of a room or a house subject to security supervision.

If more than one page is available, use <Page Up> or <Page Down> keys to move from one to the other.

Use a text editor to draw plans and write specifications. Rules to follow in preparing data:

- A customer is limited to ten (10) displays.
- Save the file in ASCII format.
- The display must remain within the 24 line limit.
- The file number is the customer number with extension P0 or P1 or P2 ... P9. Example 1234.P6
- The file must reside in the SAMM.DTA directory.

---

**ALARM MONITORING**

F4 ACCOUNT FILES <F4>

Displays the complete file of the account whose event is being processed if and only if no steps have been entered to tell the operator what to do for a specific alarm code. This might occur when an alarm code has not been defined in the system.

At this point all account information is displayed so as to give the operator all the leeway possible to define the problem, to decide and to act:

- All customers of the alarm system
- The work schedule
- All alarm codes
- The installer file

F5 COMMENT / PASSCARD <F5>

F5 brings the cursor back to the comment edition section.

F6 LATE TO CLOSE / FOLLOW UP <F6>

If an unscheduled Opening does not match with a schedule or with a late Closing, a temporary Closing time and date can be recorded.

For other type of events, processing can be postponed.

For this, write the time and date when the event is called back for processing. Current date is displayed by the system.

To erase a temporary Closing time press <ENTER>. Leave the Time field blank.

The use of this procedure is registered in the customer historic file.

F7 PRIORITY ACTION DISPLAY <F7>

Displays the step by step procedure to follow and can dial phone numbers (police, contacts, etc.) automatically. To dial automatically, a modem is required.

With the arrow keys place the inverted video bar on the phone number and press <ENTER> to dial.

NOTE: The phone has to be picked up before the end of the first ring.

After the previous <ENTER>, a request for comment about this call will be displayed. It is COMPULSORY to reply. Press <ENTER> to log the comment. Next the cursor goes back to the following line in the action procession display.

As soon as the operator presses <ENTER> to call the premises of the customer, a window is displayed asking for the password of the customer. If the Password is valid, the customer name will appear in the comment section. This password is defined in "Account management : ID INFORMATION".

**ALARM MONITORING**

PASSCARD : \_ \_ \_ \_ \_

If this option is not needed, press <ENTER> or <ESC> leaving the field blank. This tool can be called back at will by pressing <<F5>>.

By pressing <Enter> on the last line the event will be saved.

**F8 UTILITIES <F8>**

This function gives access to the UTILITIES menu (In this chapter).

**F9 LAST 10 EVENTS <F9>**

DISPLAY THE LAST 10 EVENTS			
ABC INDUSTRIES INC.			
DATE	TIME	CODE	DESCRIPTION
92-03-03	07:42	40 >	Opening by Albert Dawns
92-03-03	17:23	50 >	Closing by Albert Dawns
92-03-04	08:01		Detection of a late Opening
92-03-04	08:18	42 >	Opening not scheduled by S.Turp
92-03-04	17:08	51 >	Closing by Lucy Dawns
92-03-05	07:35	40 >	Opening by Albert Dawns
92-03-05	17:05	51 >	Closing par Lucy Dawns
92-03-05	22:44	0 >	Break in front door
92-03-05	22:57	90 >	System reset
92-03-05	12:58	40 >	Opening not scheduled by A.Dawns
<ESC> To Exit			

Function displays the summary of the last 10 events for this account. The blinking event is being processed.

**F10 MANUAL / AUTOMATIC TOGGLE <F10>**

Key (F10) allows to go back and forth between the manual and automatic modes. With manual mode, event which for whatever reason occurred and have not reached the computer, can be entered from the keyboard. The automatic mode picks the event directly from the waiting file. (See APPENDIX section).

NOTE: When activating ALARM MONITORING (F1) the manual mode is selected by default.

**ALARM MONITORING**

```
MANUAL ALARM GENERATION

Account number entry   : 12345

<ESC> Exit           <F10> Auto
```

Insert the account number and press <ENTER> to accept the code. A new window is then displayed:

```
OPTIONS

Special event
Work order
Late Closing
Alarm code
Disable account
Disable alarm code

<ESC> Cancel
```

A video inverted bar can be scrolled through the options by using the arrow keys.

Six (6) options are available for a specific customer. They can be accessed from the manual mode (F10).

- Special event: To insert a special event in the customer file.
- \* if an account has an event being held for later processing, then "Special event" is replaced by "Call back event"
- Work order: Same as the <CTRL S> option mentioned previously with the benefit of printing a work order upon receiving a call from the customer. It is imperative to document the problem in the comment section before activating key (F1). **ATTENTION: Do not activate option <CTRL S>.**
- Late Closing: A late Closing has been detected but the customer has warned the Central.
- Alarm code: To enter an alarm code manually.
- Deactivate an account: Deactivate an account without erasing his file. If an event occurs for this account SAMM will log it in his file with the mention "TEST". If no date and time limit is set to the deactivation period the events coming from this customer will not be logged in his file.
- Insert the date and time (underlined characters) and press <ENTER> to accept the data. Use the arrow keys to move from one field to another.
- Deactivate an alarm code: Option to disable, for a period, an alarm code. This is used in the instance of a faulty equipment at the account site where the same alarm code is sent over and over again in a short lapse of time. The disabling will maintain the logging of events in the account file with the mention inactive. These alarm warnings will not be displayed on the operator window until the deactivation is lifted as specified.

---

**ALARM MONITORING**

Insert the date, the time and the alarm code (underlined characters) and press <ENTER> to accept the data. Use the arrow keys to move from one field to another.

**WORK ORDER <CTRL S>**

To print a work order, enter the description of the problem in the comment section (F5) and activate function <CTRL S>.

**INACTIVE ACCOUNT <CTRL V>**

INACTIVE ACCOUNT LIST	
NUMBER	NAME
5685	ABC INDUSTRIES INC
279	YELLOW & CO.
12867	RESTAURANT SUBMARINE
<ESC>	Exit
<F10>	Print

This function displays and prints the list of customers who are inactive, who are on test and who have deactivated alarm codes. Move the cursor using the arrow keys or the <Page Up> / <Page Down> keys. To print the list, press key <F10>.

**UTILITIES**

1	- MEMO
2	- OPENING/CLOSING DELAY
3	- FIND ACCOUNT
4	- ACCOUNT EVENTS DISPLAY
5	- SET TIME
6	- ARMED/DISARMED SYSTEMS
7	- IDLE MODE
<ESC> Exit	

This menu offers seven (7) utility tools to help manage data in SAMM

**ALARM MONITORING**

**MEMO**

A note can be left for the active operator with the ALARM MONITORING function. When an event related to the specific customer occurs the note will be displayed

1 - Edit memo  
2 - Delete memo

Account number to Edit: 135

Account number to Delete:: 135

To Edit or to Erase a note write the customer number (underlined characters) and press <ENTER>.

Ten (10) lines of 70 characters each are available to write notes on the scratch pad. To change line use the arrow keys or press <ENTER>.

The system then will ask a retention period for the message. The default retention period is one (1) month.

ENDING DATE (YY/MM/DD): 95-01-01  
<ESC> Exit

Enter the ultimate date for the retention and press <ESC>. The system will ask if the SCRATCH PAD is to be saved. Answer "Y" for Yes or "N" for No.

Example:

WARNING      WARNING  
Alarm code: 31> break in, front door  
THE CONTACTS ARE ON VACATION. CALL JOHN SMITH AT 444-4444  
Expires 91-09-12      DANNY BOY  
<ESC> for next step

On each Memo opening, the alarm code and definition is displayed (top left), the operator name (bottom right) and the expiry date ((bottom left). there are ten (10) lines of information available.

**ALARM MONITORING**

**OPENING/CLOSING DELAY**

Displays Opening / Closing delays. It will stay valid for a single occurrence.

To modify Delays read: F2- ACCOUNT MANAGEMENT, Page 5 \: WORK SCHEDULE'

FIND OPENING/CLOSING DELAY	
Account number	:
Name	:
Address	:
Phone number	:
Group	:
<ESC> Exit	

There are five (5) ways to search the account: Account name, Account number, Address, Telephone number and Group.

Using the arrow keys selects the type of search required. Write the necessary information and press <ENTER>.

**NOTE:** See APPENDIX to understand the Database concept.

OPENING/CLOSING DELAY								
WORK SCHEDULE : 0				Name : SECURITY INC.				
	SUN	MON	DELAY	WED	THU	FRI	SAT	ACTIVE
Open	:	09:00	02:00	09:00	09:00	09:00		Yes
Close	:	12:00	00:30	12:00	12:00	12:00		
Open	:	13:00	00:30	13:00	13:00	13:00		Yes
Close	:	17:00	00:30	17:00	17:00	17:00		
Open	:	00:30						No
Close	:	00:30						
Open	:	00:30						No
Close	:	00:30						
Open	:	09:00	00:30	09:00	09:00	09:00		No
Close	:	17:00	00:30	17:00	17:00	17:00		
<ESC> Exit		<F2> Delete		<F3> Active		<F4> Delay		

Use the arrow keys to place the cursor at the right spot.

FIND ACCOUNT

```
                                FIND AND DISPLAY ACCOUNT FILE

Account      :
Name         :
Address      :
Phone number :
Group        :

                                <ESC> Exit
```

The customer file can be searched and displayed. Five (5) search keys are available: Account name, Account number, Address, Telephone number and Group.

Use the arrow keys to select the required search type. Write the information; account name, account number, Address, Telephone number and press <ENTER>

To browse over the account file use the <Page Up> / <Page Down> keys. To step over to the next or previous customer use the <Ctrl Page Up> / <Ctrl Page Down>.

**NOTE:** See APPENDIX to understand the Database concept.

NOTE: A search for a customer by Name, Address or telephone number does not always bring out the information in numerical order.

ACCOUNT EVENTS DISPLAY

Customer related events can be displayed.

```
                                * UTILITIES *

1 - MEMO
2 - OPENING/CLOSING DELAY
3 - FIND ACCOUNT
4 - ACCOUNT EVENTS DISPLAY

ACCOUNT NUMBER : 1234
```

To look at the event file of a customer, enter his number (underlined characters) and press <ENTER>. By default the current file is displayed. If there is no data in the current file the system will go back in time until it finds something and if nothing exists it beeps with the message:

```
No event for this account
```

**ALARM MONITORING**

ACCOUNT EVENTS DISPLAY			
SECURITY INC.			
ACCOUNT	DATE	EVENT TIME	OPERATOR
0	90-01-03	15:02:40 - 15:02:43	Danny Lalonde
CODE AND DEFINITION			
123 TEST			
COMMENTS :			
<ESC> Exit		<PGDN> Next	<PGUP> Previous

For each consultation, the most recent event is displayed. To look for other events, use these keys:

<Page Down>, <Page Up>	Next or previous event
<Ctrl-Page Down>	Event of next date)
<Ctrl-Page up>	Event of previous date
<Home>, <End>	First event of period. Last event of period
<UP>, <DOWN>	Page travel
<+> <->	Next month, Previous month

**SET TIME**

* UTILITIES *	
1 - MEMO	
2 - OPENING/CLOSING DELAY	
3 - FIND ACCOUNT	
4 - ACCOUNT EVENTS DISPLAY	
5 - SET TIME	
Are you sure [Y/N]	: <b>N</b>
<ESC> Exit	
Time	: <b>20:56</b>
Are you sure [Y/N]	: <b>N</b>
<ESC> Exit	

To adjust the system time, be careful to follow the right syntax. To complete the operation answer Yes or No to the question "Are you sure" and press <ENTER>. To cancel the operation press < ESC>.

Example: Time : HH:MM > 20:56

**ALARM MONITORING**

**ARMED/DISARMED SYSTEMS**

\* UTILITIES \*

- 1 - SCRATCH PAD
- 2 - OPENING/CLOSING DELAY
- 3 - FIND ACCOUNT
- 4 - ACCOUNT EVENT DISPLAY
- 5 - SET TIME
- 6 - ARMED/DISARMED SYSTEMS

- 1 - ARMED SYSTEMS LIST
- 2 - DISARMED SYSTEMS LIST
- 3 - DISPLAY

<ESC> Exit

This option displays an/or prints the armed/disarmed status of the alarm system for customers having an Opening/Closing control.

ARMED/DISARMED SYSTEMS LIST				
	ACCOUNT	STATUS	(91-02-17	4:23)
√	0	ARMED	(91-02-17	08:41)
	12140	ARMED	(91-01-30	16:33)
√	14160	ARMED	(90-12-25	22:00)
√	16584	ARMED	(90-12-25	22:03)
	35254	ARMED	(90-12-13	19:31)
	43185	ARMED	(91-01-10	10:03)


<ESC> Exit   <F10> Print

A check mark can be used to signal that a customer has been verified. Move the cursor up or down with the arrow keys or with the <Page Up> or <Page Down> keys. Press <ENTER>. A check mark will be displayed. To remove the check mark repeat the process.

To print the status of the system press <F10>.

Option Three (3) of the menu displays the list without having to go through option one (1) or (2).

**IDLE MODE**

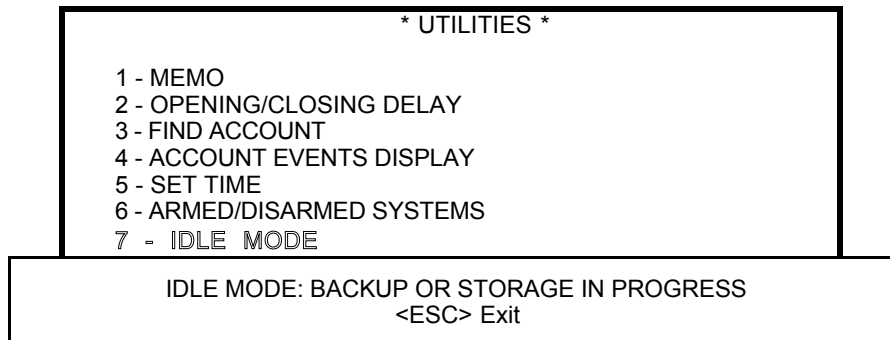

When the backup unit and the receiver(s) are installed on different computers and SAMM is on a network of computers, this option needs to be activated. This prevents file conflicts between SAMM and the backup program.

**F2 - ACCOUNTS MANAGEMENT**

<b>SAMM</b>	
<b>F1</b>	<b>- ALARM MONITORING</b>
<b>F2</b>	<b>- ACCOUNTS MANAGEMENT</b>
<b>F3</b>	<b>- BILLING</b>
<b>F4</b>	<b>- SECURITY</b>
<b>F5</b>	<b>- HISTORIC MANAGEMENT</b>
<b>F6</b>	<b>- EXIT TO DOS</b>
<b>F7</b>	<b>- PASSWORD</b>
<b>F8</b>	<b>- GENERAL INFORMATION</b>

**ACCOUNTS MANAGEMENT**

**F2 - ACCOUNTS MANAGEMENT**

ACCOUNTS MANAGEMENT	
1 -	ADD
2 -	MODIFY
3 -	DELETE
4 -	CHANGE THE NUMBER
5 -	LISTS
ESC> Exit	

NUMBER OF ACCOUNTS : 18634
----------------------------

This function gives tools to treat all data, customer related. (Create, Modify, Erase, Change of number). Group processing is also included. Customer information is distributed over nine (9) pages which can be leafed through with the <Page down> / <Page Up> keys.

When in a customer related menu, press <F10> and a window offers various options to print data regarding this customer

**Under the Customer Processing menu, a box displays the number of customers currently in the database.**

**Displayed only for operator of security level A**

**NOTE: A Text Editor is part of SAMM (See APPENDIX section)**

ACCOUNTS MANAGEMENT	
1 -	ADD
NEW ACCOUNT NUMBER :124	
(Press <ENTER> to Auto search)	

Insert the new customer number (underlined characters) and press <ENTER>.

If no number is displayed, press <Enter> and the next available number will be used. At this stage a small window is displayed to require a starting number for the search of the next available number.

START NUMBER TO SEARCH :1250
press <ENTER> Begin

**ACCOUNTS MANAGEMENT**

Insert the search customer number (underlined characters) and press <ENTER>.

```
ACCOUNTS MANAGEMENT

1 - ADD
2 - MODIFY

FIND AND DISPLAY ACCOUNT FILE

Account number :
Name           :
Address        :
Phone number   :
Group          :

<ESC> To exit
```

Insert the customer information Select with arrow keys the type of search required and press <ENTER>.

```
ACCOUNTS MANAGEMENT

1 - ADD
2 - MODIFY
3 - DELETE

ACCOUNT NUMBER TO DELETE :124
```

Insert the customer number to erase (underlined characters) and press <ENTER>.

```
ACCOUNTS MANAGEMENT

1 - ADD
2 - MODIFY
3 - DELETE

DELETE CUSTOMER NO :124
name : SECURITY INC.
Are you sure? [Y/N]: Y
```

Write "Y" for Yes or "N" for No (underlined characters)

**ACCOUNTS MANAGEMENT**

---

ACCOUNTS MANAGEMENT
1 - ADD
2 - MODIFY
3 - DELETE
4 - CHANGE THE NUMBER
OLD ACCOUNT NUMBER : <u>300</u>

Write the old customer number (underlined characters) and press <ENTER>.

ACCOUNTS MANAGEMENT
1 - ADD
2 - MODIFY
3 - DELETE
4 - CHANGE THE NUMBER
NEW ACCOUNT NUMBER : <u>4000</u>

Write the new customer number (underlined characters) and press <ENTER>.

ACCOUNTS MANAGEMENT
1 - ADD
2 - MODIFY
3 - DELETE
4 - CHANGE THE NUMBER
CHANGE ACCOUNT NUMBER 300 FOR NUMBER 4000
Are you sure? [Y/N]: <u>Y</u>

Write "Y" for Yes or "N" for No (underlined characters)

**ACCOUNTS MANAGEMENT**

```
ACCOUNTS MANAGEMENT

1 - ADD
2 - MODIFY
3 - DELETE
4 - CHANGE THE NUMBER
5 - LISTS

ESC> Exit
```

Item five 5 - LISTS displays a new window:

```
ACCOUNT LISTS

1 - DETAILED
2 - SUMMARY
3 - CALL-UP LIST
4 - ADDRESS LABELS
5 - USERS

<ESC> to exit
```

1 - DETAILED LIST OF ACCOUNTS

A detailed list will print 9 1/2 x 11 sheets. All account related information will appear on three (3) pages (Complete address, telephone, work schedule, groups, contacts and alarm codes).

```
ACCOUNT LISTS

1 - DETAILED

From : 14
To : 246
```

Write the first number (underlined characters) and with the arrow key or <ENTER> step to the next line. To complete the Opening write the second number and press <ENTER>.

**ACCOUNTS MANAGEMENT**

To change the first Opening use the arrow key to back up and repeat the process.

ACCOUNT LISTS	
1 - DETAILED	
1 - BY NUMBER 2 - BY GROUP	
GROUP NAME 1	: <u>COMMERCE</u>
GROUP NAME 2	: <u>APRIL</u>
STARTING NUMBER	: <u>20573</u>
<ESC> To Exit	

When printing a detailed list, a summary list or sticker address by group of accounts the option exist to print accounts who are in two different groups.

Example: By selecting the groups COMMERCE and APRIL, all accounts belonging to both groups are printed. If the account number is in only one group it will not be printed.

To print a list of accounts belonging to two groups, write the name of the first group (underlined characters) and with the arrow key step to next line and write the name of the second group. It is not compulsory to write an account number in the field STARTING NUMBER.

To make a change in the first group use the arrow key to step back and repeat the process.

To print an entire group write the name of the group in the field "GROUP NAME 1". It is not compulsory to write a name in the field "GROUP NAME 2".

To print a group or an interval of group starting with an account number, write the account number in the field "STARTING NUMBER".

ACCOUNT LISTS	
1 - DETAILED	
From	: <u>14</u>
To	: <u>246</u>
√ GENERAL INFORMATION	
ALARM CODES	
ID INFORMATION	
MEMO	
<SPACE> To select	

To print a detailed list of accounts by number or by group, use the option to choose from one (1) to four (4) pages. The same applies to print the Memo (defined in the UTILITIES section) related to an account. To select the required pages, move the cursor with the arrow keys and press the space bar. A check mark confirms each choice. Start printing by pressing <ENTER>.

**ACCOUNTS MANAGEMENT**

2 - SUMMARY LIST OF ACCOUNTS

A summary list of customer related information will print on a 9 1/2 x 11 sheet. The data (account number, name, address, postal code/zip code, and telephone number) will print on three (3) lines. The explanation is the same as for the DETAILED LIST OF ACCOUNTS.

3 - CALL-UP LIST

Prints on 8 1/2 x 11 letter head paper the current date, name, address, city, province/state, postal/zip code, telephone number, list of persons to call. The space is set so as to allow message writing.

1 - BY NUMBER
2 - BY GROUP
<Esc> to exit

Specify limits for list based on numbers:

From :	<u>14</u>
To :	<u>246</u>
<Esc> to exit	

For a list by groups, specify the groups. Up to two groups may be entered. The starting number for account number allows better printing control if a repeat is required.

1 - BY NUMBER
2 - BY GROUP
<Esc> to exit

GROUP NAME 1	:	<u>COMMERCE</u>
GROUP NAME 2	:	<u>APRIL</u>
STARTING NUMBER	:	<u>20573</u>
<ESC> To Exit		<F10> List

4 - ADDRESS LABELS

Request for a list of labels is processed like a DETAILED LIST OF ACCOUNTS.

5 - USER LABELS

Each address is printed on a sticker 3 1/2 inch wide by 15/16 inch high, one column per row. Request for a list of labels is processed like a DETAILED LIST OF ACCOUNTS.

**ACCOUNTS MANAGEMENT**

**ACCOUNT PAGES DESCRIPTION**

Complete address of customer.

ACCOUNT INFORMATION :	125	.Insert...
Name	:	SECURITY INC.
Address	:	1575 BELVEDERE RD
City, Province/State	:	STRATFORD, (FLORIDA)
Postal code/Zip code	:	34744
Phone number 1	:	(407) 444-4444
Phone number 2	:	(407) 333-3333
MODIFIED ON 95-12-18 BY OPERATOR 23		
<ESC> Exit		

When the cursor gets to the field "City, Province/State", the window displays a video inverted field requesting the abbreviated code for this geographical site in this way:

City, Province/State : **xx**

These short codes must have been previously entered in the database. (GENERAL INFORMATION, ADD OR MODIFY A CITY). If they have not been entered it is possible to insert them at the customer creation time but it is an inefficient process. If one does not know the number corresponding to the city, press <F9> and the search window will be displayed. The detailed operation of these search windows is described in GENERAL INFORMATION, DD OR MODIFY A CITY.

The bottom of the page displays the time and date of the last changes and the operator number.

This page holds the emergency telephone numbers.

MISC	:	125	Insert...
Security	:		
Memo	:		
	:		
	:		
	:		
	:		
Police	:		
Fire Dept.	:		
Emergency	:		
<ESC> To Exit			

**ACCOUNTS MANAGEMENT**

Four lines following under "Memo" are used to write comments related to alarm processing. These comments appear in box (1) of ALARM MONITORING. There are no fields to enter data at this stage for Police, Fire Dept. and Emergency. This data is entered in the GENERAL INFORMATION when a new city is defined.

Example: Crossroad street

RESPONSIBLE NOTIFICATION INFORMATION : 125			Insert...
Name	Title	Phone Number	
-----	-----	-----	
PAUL GREY	Owner	561-3455	
DENISE SOFT		561-4564	
CARL DUPONT		533-2455	
<ESC> Exit <F2> Delete <F3> Insert			

The page of persons to contact holds ten (10) lines divided in three columns (Name, Title, Telephone number). Pertinent information should be entered as needed.

To switch column, press <ENTER>. To change line, use the arrow key at the beginning of each column.

To repeat the information from the previous line press <ENTER> when the cursor is positioned at destination. To keep the field empty, enter a blank character before pressing <ENTER>.

ALARM CODES AND DESCRIPTION : 152				.Insert...
Code	Description	T	Priority	action
-----	-----	---	-----	-----
60..6F	*1234			
10	Panic fire	1	ADJ	
11..1F	Fire by smoke detector	1	ADJ	
20	Panic	1	AC	
30	BA front door	2	ACJIH	
31,32,33	BA basement	2	ACJIH	
34..3F	BA	2	ACJIH	
40..45	Opening	I	AJIH	
50..55	Closing	O	AJIH	
80	Low battery	S		
ABCD,1234	Reset	A		
<+> <-> Paging		<F2> Delete	<F3> Insert	<F4> Copy code

**ACCOUNTS MANAGEMENT**

The page for alarm codes has an unlimited number of 10 line displays. Each line is divided in (4) four columns (Code, Description, Type, Priority action):

To help mount the file of a new customer, the Copy code <F4> function will copy the pages of another customer in a blank page.

Another feature of the system is presented as an example on the first line below the title:

Code	Description	T	Priority action
60..6F	*1234		

When the same alarm panel is used for two (2) accounts, the account number, among other data sent by the panel, becomes also a system number. When defining the alarm codes and their definition, one must tell SAMM that certain alarm codes, between 60 and 6F in this example, coming under the system code, 152, again in this example, belong to account 1234. To specify the reference, an asterisk followed by the account number will do the trick. Naturally one must define the codes and their description for account 1234 at the appropriate place.

**Code:** ALPHANUMERIC Alarm codes (0 to 9 and A to Z) of one (1) to four (4) characters.

Three ways can be used to insert the alarm codes: a specific code, an interval of codes or finally two (2) or three (3) non consecutive codes.

- .Specific code : 10
- .Interval of codes : 10..19 (from 10 to 19 inclusively)
- .Non consecutive codes : 10,14,16 (3 maximum)

A DELAY, from 1 to 99 minutes, can be added to an alarm type to postpone the moment it is displayed for processing. The alarm code is sent to the account file the when received and processed within the prescribed delay.

The DELAY is defined by :MM where MM represents minutes. The time indicator is positioned after the code to delay. In this way: :1 = 1 minute, :5 = 5 minutes, :10 = 10 minutes, :99 = 99 minutes.

Example: 60:30 Alarm code 60 will be displayed for processing 30 minutes after being received

To change column press <ENTER>.

**Description :** Description of the corresponding alarm code. By leaving the field empty and pressing <ENTER>, the information from the previous line will be copied. This means a faster way to enter data.

**T (Type) :** Alarm type corresponding to the alarm code. When the cursor is in this field, the following menu is displayed giving available options.

ALARM TYPE		
1..9	- Priority level	.... Priority level of events
A	- No action	.... Not displayed
I	- Open	.... Open/Close Control
O	- Close	.... Open/Close Control
R	- Autotest	.... 24 hour reporting
S	- Auto work order	

**ACCOUNTS MANAGEMENT**

For choice R (Autotest), the system requires:

Number of hours between Tests	:	24
Delay (minutes)	:	360
Permanent=Yes --- Synchronized=No	:	Yes

Insert values. To change field use down arrow key or <ENTER>.

- . Number of hours between Tests is 1 to 999. Default value is 24 hours.
- . Delay between Tests is 0 to 999, expressed in minutes.
- . Permanent (Yes) is the default value. It means synchronization starts with last Test received, whether or not the panel is in operation.
- . Synchronization (No) means to synchronize on all events received from the panel. Does not react to Test not received if the panel is off.

If Autotest does not happen within the expected delay, an alarm for the account is sent to the operator:"AUTOTEST NOT RECEIVED". The event will be logged.

**Priority action :** When the cursor is in this field, the following menu is displayed. Insert the order of steps for alarm processing by using the mnemonics. Write the letter in line with the contact to phone. If no contact appears in line with the letter, it means that no telephone number is available.

Priority action level			
A	-	Account phone number 1	.... customer information
B	-	Account phone number 2	
C	-	Police	.... Emergency telephone
D	-	Fire Dept.	
E	-	Emergency	
F	-	Security	
G	-	Contact 1	
H	-	Contact 2	.... Information on contacts
I	-	Contact 3	
J	-	Contact 4	
K	-	Contact 5	
L	-	Contact 6	
M	-	Contact 7	
N	-	Contact 8	
O	-	Contact 9	
P	-	Contact 10	

**ACCOUNTS MANAGEMENT**

SPECIAL ALARM CODES FOR RECEIVERS

Sescoa 3000R 4 x 3 (Super Fast)

Each event is preceded by a character which identifies its type. It is most important to insert these characters at the beginning of all alarm codes.

- |              |              |
|--------------|--------------|
| A = Alarm.   | O = Opening. |
| R = Reset.   | C = Closing. |
| T = Trouble. |              |

Characters predefined by the SESCOA 3000R can be received.

- |   |                             |
|---|-----------------------------|
| D = Alarm and Reset.                    | M = Transmitter failure end |
| E = Report each 24 hour.                | V = Telephone trouble       |
| F = Transmitter low battery             | X = Restore telephone       |
| G = No battery detected by transmitter. | Y = Panic or hostages.      |
| J = Transmitter sector failure          | Z = Bell problem (BA).      |
| k = Transmitter message test!           | ! = Bell problem end        |

Example:

ALARM CODES AND DESCRIPTION : 152				.Insert...
Code	Description	T	Priority	action
-----	-----	---	-----	-----
A10	Panic fire	1	ADJ	
A11..A1F	Fire by smoke detector	1	ADJ	
A30	BA, front door	2	ACJIH	
A31,A32	BA, basement	2	ACJIH	
A33..A3F	BA	2	ACJIH	
0001..0999	Opening	I	AJIH	
C001..C999	Closing	O	AJIH	
R00..RFF	Reset	A		
T00..TFF	System trouble			
K	Transmitter message test			
V	Telephone trouble			

<+> <-> Paging <F2> Delete <F3> Insert <F4> Copy code

---

**ACCOUNTS MANAGEMENT**

Ademco 4 x 3 x 3 Contact ID

The SAMM software can receive Contact ID format in Standard or Compressed mode.

Compressed Contact ID

This mode looks like Radionics format save for the four (4) digit alarm code it displays  
The first digit is the alarm type while the other three address the zone or account number.

First character description

A = Alarm	B = Zone cancellation
R = Reset	O = Opening
T = Trouble	C = Closing

Some alarm codes or user codes are not to be used because they are predefined by the transmitter.

PREDEFINED ALARM CODES AND TROUBLE CODES.

121	142	202	300	301	302	303
304	305	306	307	308	309	321
322	323	324	325	331	332	335
336	350	351	352	353	354	355
356						

PREDEFINED USER CODES:

400	403	404	405	406	407	408
409	411	412	413	414	415	

Standard Contact ID

This mode uses seven (7) characters. The first one qualifies the event; E= Event, R= Restore. The following three (3) characters are for the Event code. Each Panel supporting Contact ID has a list of such codes. The last three characters are for the zone number or account number.

Contact ID may be entered two ways in the CODE field of the alarm code description.

First approach is by entering the seven (7) digit code. This is efficient to identify each zone separately.

Second, enter the qualifier and the zone for an alarm code. Then all alarm with the same event code in different zones will have identical description.

This approach is useful for predefined code such as Low battery (E302), Opening (E401), Closing (R401).

To manage the three digit account number read F2 Account management (Page 6 : ID INFORMATION)

It is not required to enter the qualifier R (Restore). SAMM recognizes this type of code and enters the code by default (Reset). To qualify the source of a Reset enter its code and description.

By default, for Standard Contact ID, SAMM looks for undefined alarm codes in account zero (0).

**ACCOUNTS MANAGEMENT**

ERROR CODES (ADEMCO 685)

A	Alarm	A	Alarm
RCV	Receiver	LIN	Line
ARCV1	Computer failure	ALIN1	Line 1 failure
ARCV2	Serial printer failure	ALIN2	Line 2 failure
ARCV3	Extension printer failure	ALIN3	Line 3 failure
ARCV4	Parallel printer failure	ALIN4	Line 4 failure
ARCV5	AC power failure	ALIN5	Line 5 failure
ARCV6	Battery failure	ALIN6	Line 6 failure
		ALIN7	Line 7 failure
		ALIN8	Line 8 failure
R	Reset	R	Reset
RCV	Receiver	LIN	Line
RRCV1	Reset Computer	RLIN1	Reset Line 1
RRCV2	Reset Serial printer	RLIN2	Reset Line 2
RRCV3	Reset Extension printer	RLIN3	Reset Line 3
RRCV4	Reset Parallel printer	RLIN4	Reset Line 4
RRCV5	Reset AC power	RLIN5	Reset Line 5
RRCV6	Reset Battery	RLIN6	Reset Line 6
		RLIN7	Reset Line 7
		RLIN8	Reset Line 8

Example:

ALARM CODES AND DESCRIPTION : 152			
Code	Description	T	Priority action
A010	Panic fire	1	ADJ
A011..A01F	Fire by smoke detector	1	ADJ
A020	Panic	1	AC
A030	Break in front door	2	ACJIH
A031,A032	Break in basement	2	ACJIH
A033..A039	Break in	2	ACJIH
0000..0FFF	Opening	I	AJIH
C000..CFFF	Closing	O	AJIH
T302	Low battery	S	
R000..RFFF	Reset	A	
T000..TFFF	Trouble alarm system		

.Insert...

<+> <-> Paging <F2> Delete <F3> Insert <F4> Copy code



**ACCOUNTS MANAGEMENT**

The customer who has control service for Opening/Closing can use two (2) permanent schedules, one (1) temporary schedule and two (2) automatic schedules. If the customer does not have this service, go to next page.

**ATTENTION: If a customer has control service for Opening/Closing, and his accesses are not regular, go to next page.**

To insert working hours, press letter "Y" to the question "Control for Open/Close [Y/N]".

To erase schedules press letter "N" to the question "Control for Open/Close [Y/N]". Next answer "Y" or "N" to the question "Are you sure?"

Position the cursor with the arrow keys or press <ENTER>.

To insert the time use this method: 200 <ENTER> (= 02:00 hour). The Editor will refuse any invalid Open for the time.

		SUN	MON	TUE	WED	THU	FRI	SAT	ACTIVE
<u>WORK SCHEDULE</u> : 0		Open/Close control [Y/N] : Yes							
P1	Open :		09:00	09:00	09:00	09:00	09:00		Yes *
	Close :		12:00	12:00	12:00	12:00	12:00		
P2	Open :		13:00	13:00	13:00	13:00	13:00		Yes *
	Close :		17:00	17:00	17:00	17:00	17:00		
M1	Open :								No
	Close :								
A1	Open :								No
	Close :								
A2	Open :		09:00	09:00	09:00	09:00	09:00		Yes
	Close :		17:00	17:00	17:00	17:00	17:00		
		<ESC> Exit		<F2> Delete		<F3> Active		<F4> Delay	

A schedule can be activated or deactivated. To validate a schedule press key <F3>, choose the required schedule with arrow keys or <ENTER>. Enter letter "Y" for (Yes) to activate or letter "N" for (No) to deactivate.

When P1 or P2 (P = permanent) are activated, an asterisk is displayed on the right hand side of the window to show that the schedule is active and in operation.

ENTER ENDING DATE : **95-08-10**

Upon activating schedule M1 (M = Manual) an expiry date will be requested Press <ENTER> with or without an expiry date. An asterisk is then displayed on the right hand side of the window to show that the schedule is active and in operation.

**ACCOUNTS MANAGEMENT**

If an expiry date is entered (underlined characters), the asterisk of the first two (2) schedules will disappear for these schedules will not be in operation any more. At expiration time schedule M1 will automatically deactivate itself and the first two schedules will return into operation. This approach is quite useful for customers changing schedule temporarily.

Upon activating schedules A1 and/or A2 (A = automatic) they will become active but not in operation. To put these schedules in operation, a date interval associated with a group must be defined (See GROUP MANAGEMENT) and the account has to be entered in the group. When the date to change schedule is met the schedules in operation (P1, P2, M1) will remain active but not in operation and the automatic schedules will now be in operation. At the end of this period, the automatic schedules will cease to be in operation to be replaced by the (P1, P2, M1) schedules.

ADDITIONAL FUNCTION OF THE RULER

For a given schedule to have a different Open/Close delay, move the Ruler using arrow keys to position the cursor. Enter the new delay. This delay becomes permanent.

When creating a new schedule or pressing key <F4>, a message is displayed requesting to answer questions regarding the delays and the display of events occurring during the "new" periods. One has to decide what is the desired Opening delay applicable before Opening time and the Closing delay applicable after Closing time.

The same thing applies to display of events that occur during normal time.

OPEN/CLOSE ADJUSTMENT

Opening delay	:	<u>00:30</u>
Late opening delay	:	<u>00:00</u>
Closing delay	:	<u>00:30</u>
Display normal Opening[Y/N]	:	<u>N</u>
Display normal Closing [Y/N]	:	<u>N</u>
Normal Open/close in schedule [Y/N]	:	<u>Y</u>
<ESC> Exit		

Answer all questions (underlined characters) and press <ENTER> to change line. To go back up use the UP arrow key. The best way to describe these options is by an example. So...

If a customer has a thirty (30) minute Opening delay and the Opening occurs at eight AM (8:00), he will enjoy a period ranging from seven-twenty-seven AM (7:27) to eight AM to get in without causing an intervention. The three (3) minute delay is the standard delay used between the Central Station and the customer.

If a Late Opening delay of 30 minutes is also requested and the Opening occurs at eight AM (8:00), he will enjoy a period ranging from seven-twenty-seven AM (7:27) to eight thirty AM (08:30) to get in without causing an intervention. The accumulated delays are, in this example: 3 minute standard delay plus 30 minute delay before opening time plus 30 minute lapse delay after opening time.

Press <ESC> to get a warning if Opening delay and Lapse Opening delay are zero (0) minute. the use of this option deactivate Late Entry Detection.

**ACCOUNTS MANAGEMENT**

If a customer has a forty-five (45) minute Closing delay and the Closing occurs at five PM (17:00), he will enjoy a period ranging from five PM (17:00) to five-forty-five PM (17:45) to get out without causing an intervention.

Now, after answering the questions regarding the delays, it is necessary to decide whether an event occurring during those "new" normal periods will be displayed and require an intervention.

So, by answering Yes to "Normal Opening on display [Y/N]" will cause all events occurring during the normal Opening window to be displayed for intervention. A "No" answer will tell the system to simply log the event without warning the operator.

The same pattern applies to the question "Normal Closing on display [Y/N]". A "Yes" answer to this question will cause all events occurring during the normal Closing window to be displayed for intervention. A "No" answer will tell the system to simply log the event without warning the operator.

Another Ruler function

To get a different Opening or Closing delay for a given schedule, move the Ruler to the selected position using the arrow keys. Next enter the delay. The new delay is permanent.

To the question "O/C normal on schedule [Y/N]", reply "Yes" if events occurring during the scheduled period (7:27 to 17:45) are to be considered normal and simply logged Reply "No" if they are to be displayed for intervention.

ULC SCHEDULES : If the protected customer is ULC approved, the Opening delay is set at 0 minute and the Late opening delay at 45 minutes. This customer will have 3 minutes before scheduled time to open and up to 45 minutes after.

For Closing, according to ULC schedules, the customer has a 30 minute delay. Accordingly, the delay parameter for Closing has to be set to 15 minutes approximately so as to leave enough time to contact the customer before the delay expires.

ID INFORMATION : 10		
Code	Name	Passcard
-----	-----	-----
40,50	Andrew Gerber	4564
41,51	Gail Dunns	6786
O002,C002	Amy Villers (Contact ID Compressed)	4576
003	Stef Turnbull (contact ID not compressed)	3498
OP04,CL04	Jean Allan (SIA)	4590

<ESC> Exit <+> <-> Paging <F2> Delete <F3> Insert

The page for alarm codes has an unlimited number of 10 line displays. If page is full press<+> to open a new page. If file holds multiple pages scroll with <+> <->. The information on each line is: Code, Name, Passcard

**Code:** Open or Close codes for the accounts (4x2 and Contact ID compressed) and account number only for contact ID not compressed.

**ACCOUNTS MANAGEMENT**

Example:      Open code            =      4 or O or OP  
              Close code         =      5 or C or CL  
              User                =      2  
              Associating the account and Open/Close codes gives:  
              Code                =      42            Open code for account 2 (4x2)  
              Code                =      52            Close code for account 2 (4x2)  
              Code                =      O002        Close code for account 2 (Contact ID compressed)  
              Code                =      C002        Close code for account 2 (Contact ID compressed)  
              Code                =      002        Close code for account 2 (Contact ID)

To change column press <ENTER>.

**Name:**            Enter the name corresponding to the Open/Close code. This name is displayed when Open/Close events are received and also on printed reports related to Open/Close.

To control closely a person given access to the premises, insert an interrogation mark (?) in the field. The name will be displayed in all alarm conditions with warning "HOT USER"

**Passcard:**        Enter user Identification Code or press <ENTER> leaving field empty for the system to supply a default code.

```
ACCOUNT INFORMATION : 1234                                     .Insert...
Alarm company       : 1234      <F9> List
Phone number       : 111-2222  2222-3333
Installation date   : 96-01-31
Installation        : ADEMCO 4140 XM
                   : 3 INFRA RED FORCE 2
                   : BATTERY 7A
                   : BRAKE GLASS C&K
Receiver phone no. : 666-4444
Panel phone number : 222-3333
                   <ESC> Exit
```

This page holds all pertinent information related to the installation. The choice of an installer implies that the customer is automatically in his group.

ACCOUNTS MANAGEMENT

Insert ..

BILLING INFORMATION : 5

Ledger number : 444 4444

Name : Sylvia March

Att.

Address : 23, Lorry St

City (Province/State) : Bath, (NB)

Postal code/Zip code : D3K S4F

Export account info [Y/N] : N

SERVICE DESCRIPTION	G/L #	PRICE	Raise	T	Pay.
MONITORING FEE	1401	480.00	2.00	%	1
CONTROL OPENING / CLOSING	1421	360.00	5.00	\$	1
SERVICE CONTRACT	1431	125.00	0.00	%	1
.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....

<ESC> Exit

This page holds all the information required by the customer for his billing.

Right on top is the system or user number.

Then the account number is by default the telephone number of the customer. If the telephone number changes, so does the account number, automatically. The customer or system number can also be used as account number. Here also, if the customer number changes, so does the account number, automatically.

Then we have : Name, Att., Address, City, Province/State, Postal code/Zip code in the address portion of the invoice. If the billing address is the same as the customer address, press <Enter> leaving all fields blank. The customer address will replace the blanks.

This page is displayed only to Operators given security access level A.

Export file : By answering "Yes" to this question, the customer information, new or modified, will be posted in the ASCII file

\\SAMM.DATA\CUSTOMER.TFT (ASCII)

Format	Characters
[ACCOUNT NO] •	8
[NAME] •	40
[Att.] •	40
[ADDRESS] •	30
[CITY, PROVINCE/STATE] •	40
[POSTALCODE / ZIP CODE] •	7
[TEL NO]	15

**ACCOUNTS MANAGEMENT**

Note 1 Each field is separated from the other by the ASCII character #254 (small square) (•)

Note 2 The field [No] can have this format: [Old>New] where the ">" sign means a change of number from Old to New

IMPORTANT: After completing the update, erase this file.

Example: 10125 5556666 ABC Industries M Kyr 10 Rixon St-John On LOH 1A4

This file is used to export data from SAMM to any accounting package able to import data. Each accounting package should supply the interface module for this task. These accounting packages have a configuration setup that is not included in SAMM.

Five (5) different services can be billed. Each service line is divided in six (6) columns (Service description, # G/L, Price, Raise, Type, PAY.).

Service description and G/L It is imperative to define the services offered and the G/L #

When the cursor stops beside the Service description field, a window is then displayed. This window contains a choice of ten (10) services that have been defined at creation time in the GENERAL INFORMATION section.

0	MONITORING FEE
1	CONTROL OPENING / CLOSING
2	SERVICE CONTRACT
3	.....
4	.....
5	.....
6	.....
7	.....
8	.....
9	.....

Enter the digit for the service selected. The Service description and the # G/L are pasted and the cursor goes to the next field PRICE for an entry. Enter the price and proceed in the same manner for Raise, and PAY.

Press <F2> to Erase a Service description line. Press <F3> to Insert a Service description line.

The Raise, Type and Pay. fields require additional information. Index means an annual cost of living increase. Type is the calculation mode in dollar (\$) or in percentage (%). PAY. defines the period in months for long term contracts. A zero means no long term and any period other than zero is treated in a decreasing manner (-1) each time an invoice is produced.

By pressing <ENTER> leaving the Service description field empty, then the Price, Raise, Type and G/L# fields will be set to zero.

NOTE : Indexing to the cost of living becomes active when invoices are prepared.

NOTE : # G/L= General Ledger number

**ACCOUNTS MANAGEMENT**

DISPLAY ACCOUNT GROUPS			AUTO WORK SCHEDULE	
NAME	DEFINITION		From	Till
√	COMMERCE	COMMERCE SUPERVISION		
√	CTRLS	OPENING / CLOSING CONTROL		
	FAMILY	FAMILY RESIDENCE		
√	NOEL	CHRISTMAS SCHEDULE	95-12-06	95-12-23
	MOIS01	JANUARY INVOICES		
	MOIS02	FEBRUARY INVOICES		
	MOIS03	MARCH INVOICES		
√	MOIS04	APRIL INVOICES		
	MOIS05	MAY INVOICES		
	MOIS06	JUNE INVOICES		

<ESC> Exit    <RETURN> Select/Unselect

Each customer can be registered in sixteen (16) different groups only. The groups are the basis of multiple report generation (See PRINTING MANAGEMENT, or GROUP MANAGEMENT for AUTOMATIC SCHEDULE).

To register a customer in a group, place the cursor on the line of the group with the arrow keys or with the <-> / <+> keys and press <ENTER>. A small check mark will appear to show that this customer has been registered in the selected group.

To remove a customer from a group, place the cursor on the line of the group to deactivate, press <ENTER>.. The small check mark will disappear and the customer will not be part of the selected group anymore.

To move the cursor faster, use the lettered keys.

Example:            By pressing key "P" the cursor will go to the first group whose name begins with a "P".

**F3 - BILLING**

<b>SAMM</b>	
<b>F1</b>	<b>- ALARM MONITORING</b>
<b>F2</b>	<b>- ACCOUNTS MANAGEMENT</b>
<b>F3</b>	<b>- BILLING</b>
<b>F4</b>	<b>- SECURITY</b>
<b>F5</b>	<b>- HISTORIC MANAGEMENT</b>
<b>F6</b>	<b>- EXIT TO DOS</b>
<b>F7</b>	<b>- PASSWORD</b>
<b>F8</b>	<b>- GENERAL INFORMATION</b>

**F3 - BILLING**

This chapter tells how to do BILLING (F3) for services rendered to customers.

BILLING	
1	- ADDRESS LABELS
2	- AUTOMATIC BILLING
3	- BILLING SUMMARY
4	SUMMARY OF ALL PAYMENTS
5	- SUMMARY OF ALL LAST PAYMENTS
<ESC> Exit	

**1 - ADDRESS LABELS**

Each address is printed on a sticker 3 1/2 inch wide by 15/16 inch high, one column per row.. Each has the address of the company or the person due to receive the data. The information is entered in the account file in F2 - ACCOUNT MANAGEMENT Page 8 BILLING INFORMATION. Printing by number or group is offered.

1	- BY NUMBER
2	- BY GROUP
<Esc> to exit	

Specify limits for list based on numbers:

From	:	<b>14</b>
To	:	<b>246</b>
<Esc> to exit		

For a list by groups, specify the groups. Up to two groups may be entered. The starting number for account number allows better printing control if a repeat is required.

1	- BY NUMBER
2	- BY GROUP
<Esc> to exit	

**BILLING**

GROUP NAME 1	:	<b>COMMERCE</b>
GROUP NAME 2	:	<b>APRIL</b>
STARTING NUMBER	:	<b>20573</b>
<ESC> To Exit		<F10> List

2 - BILLING

To start the billing process choose line 3 BILLING and complete the information in the window:

BILLING	
1 -	ADDRESS LABELS
2 -	AUTOMATIC BILLING

1 -	BY NUMBER
2 -	BY GROUP
<Esc> to exit	

From :	<b>5</b>
To :	

INVOICE INFORMATION	
DATE	: 99-09-01
APPLY RAISE	: No
EXPORT DATA	: Yes
DESCRIPTION	: RENEWAL JANUARY
MESSAGE	: HAPPY HOLIDAYS
	: BE CAREFUL WHILE DRIVING
<ESC> To Exit	

Or by group:

1 -	BY NUMBER
2 -	BY GROUP
<Esc> to exit	

GROUP NAME 1	:	<b>COMMERCE</b>
GROUP NAME 2	:	<b>APRIL</b>
STARTING NUMBER	:	<b>20573</b>
<ESC> To Exit		<F10> List

INVOICE INFORMATION	
DATE	: 99-09-01
APPLY RAISE	: No
EXPORT DATA	: Yes
DESCRIPTION	: RENEWAL JANUARY
MESSAGE	: HAPPY HOLIDAYS
	: BE CAREFUL WHILE DRIVING
<ESC> To Exit	

Additional information needs to be entered to print invoices. To change field, use the arrow keys. To complete the operation and start printing press <ENTER> on the last line of the display box.

DATE : Enter the invoice date or press <ENTER> and leave the field free to get the current date.

APPLY RAISE : Enter "Y" for Yes or "N" for No. For "yes" the amount of the invoice will be indexed according to the parameters in the customer file. Next, the system will ask if the indexation in the customer file is to be held. The answer is "Y" or "N" .

EXPORT DATA : Answering "yes" to this question sends the billing information to the ASCII file "S\AMM.DTA\INVOICE.TFT" in the format:

[1] • [2] • [3] • [4] • [5] • [6] • [7] • [8] • [9] • [10] • [11] • [12] • [13] • [14] • [15] • [16]

1	-	DATE	9	-	G/L # OF SERVICE 3
2	-	INVOICE NUMBER	10	-	COST OF SERVICE 4
3	-	CUSTOMER NUMBER	11	-	G/L # OF SERVICE 4
4	-	COST OF SERVICE 1	12	-	COST OF SERVICE 5
5	-	G/L # OF SERVICE 1	13	-	G/L # OF SERVICE 5
6	-	COST OF SERVICE 2	14	-	TAX 1
7	-	G/L # OF SERVICE 2	15	-	TAX 2
8	-	COST OF SERVICE 3	16	-	TOTAL

Each field is divided by a small square (ASCII code 254)

This file is used to export the information to the accounting package. The accounting package usually has an importing options for ASCII files that converts this data into usable form.

NOTE: It is important to erase file "INVOICE.TFT" after each completed export.

**BILLING**

3 - BILLING SUMMARY

A detailed list will print 9 1/2 x 11 sheets. Printed information is: account number, name, service description, price, index in currency or in (%).

BILLING	
1	- ADDRESS LABELS
2	- AUTOMATIC BILLING
3	- BILLING SUMMARY

1	- BY NUMBER
2	- BY GROUP
<Esc> to exit	

From	:	<b>5</b>
To	:	

Or by group:

BILLING	
1	- ADDRESS LABELS
2	- AUTOMATIC BILLING
3	- BILLING SUMMARY

1	- BY NUMBER
2	- BY GROUP
<Esc> to exit	

GROUP NAME 1	:	<b>COMMERCE</b>
GROUP NAME 2	:	<b>APRIL</b>
STARTING NUMBER	:	<b>20573</b>
<ESC> To Exit		<F10> List

4 - SUMMARY OF ALL PAYMENTS

For all customer having distributed payments (≠ zero) defined in the BILLING INFORMATION file, print Accounts and residual payments.

5 - SUMMARY OF ALL LAST PAYMENTS

Print list of all customer having one payment left to go. (PAY. =1 in BILLING INFORMATION file)

**F4 - SECURITY**

**SAMM**

- F1 - ALARM MONITORING**
- F2 - ACCOUNTS MANAGEMENT**
- F3 - BILLING**
- F4 - SECURITY**
- F5 - HISTORIC MANAGEMENT**
- F6 - EXIT TO DOS**
- F7 - PASSWORD**
- F8 - GENERAL INFORMATION**

**F4 - SECURITY**

SECURITY
1 - OPERATOR'S MANAGEMENT
2 - OPERATOR'S MESSAGE
3 - SECURITY SETUP
<ESC> Exit

SAMM is protected against mismanagement and fraud by access levels and passwords. For a person to work in SAMM, the Manager needs to write the complete name, operator number, password and access level.

NOTE: An operator can modify his password.

OPERATOR'S MANAGEMENT			
OPERATOR'S NAME -----	NUMBER -----	PASSWORD -----	LEVEL -----
FLO BANTING	1	ZEBRA	A
ROLLY FLOWER	2	TITANIC	B
LUCAS FRANK	3	465781	B
JOHN ROY	4	WINGENDER	B
JULIUS DUNN	5	INTEGRAL	C
DANIEL JOY	6	NICEHEART	C
GIL PATENT	7	CANARY	C
GUS FRONT	8	TUBE	C
BUD DESJARDINS	9	AUTOMOBILE	C
GEORGIO BURNS	10	GOVERNOR	C
<F2> Delete      <F10> List      <ESC> Exit			

The OPERATOR'S MANAGEMENT page holds one hundred (100) lines. Each line is divided in four (4) columns (Operator's name, Number, Password, Level).

Enter information in the appropriate column and move the cursor from one column to another by pressing <ENTER>. To change line use the arrow keys or <Page Up> / <Page Down> on the first column.

NOTE: The operator number is unique. Each operator must have its own.

NOTE: See Level description next page.

**SECURITY**

```

*****OPERATOR'S MESSAGE*****

1 - Edit      2 - Delete

<ESC> Exit
    
```

The system allows messages to operators. When an operator logs on, his messages are displayed. By pressing <ESC> he erases his messages and it will not be saved.

To Edit a message to an operator, press 1, write the message and press <ESC>. Delete a message to an operator, press 2, write the operator number and press <ENTER>.

Five lines are available for a message. Use arrow keys or press <ENTER> to change line. Press <ESC> to quit.

APPLICATION TITLE		SECURITY CONFIGURATION												
		ACCESS LEVEL												
		A	B	C	D	E	F	G	H	I	J	K	L	M
1	- ALARM MONITORING.....	•	•			•	•	•	•					
2	- ALARM MONITORING (ALARM CODE ENTRY).....	•												
3	- ALARM MONITORING (DISABLE ACCOUNT).....	•	•		•									
4	- ALARM MONITORING (DISABLE CODE).....	•												
5	- ACCOUNT MANAGEMENT (ADD).....	•	•	•	•									
6	- ACCOUNT MANAGEMENT (MODIFY).....	•	•	•	•									
7	- ACCOUNT MANAGEMENT (DELETE).....	•	•	•										
8	- ACCOUNT MANAGEMENT (CHANGE NUMBER).....	•	•	•										
9	- ACCOUNT MANAGEMENT (LIST).....	•												
10	- BILLING.....	•	•	•										
11	- SECURITY.....	•	•	•	•									
12	- SECURITY (OPERATOR'S MESSAGE).....	•												
13	- HISTORIC MANAGEMENT (DELETE).....	•	•	•	•	•	•							
14	- HISTORIC MANAGEMENT (LIST).....	•												
15	- HISTORIC VIEW.....	•	•	•	•	•								
16	- HISTORIC (DATA TRANSFER).....	•	•	•										
17	- EXIT TO DOS.....	•	•	•	•	•	•							
18	- UTILITIES (MEMO).....	•												
19	- UTILITIES (SET TIME).....	•												
20	- UTILITIES (IDLE MODE).....	•												

<ESC> Exit

Thirteen (13) access levels are available of which twelve (12) are programmable. Level A is for master. Levels B to M are for Staff. Only A has access to F8 menu. To Activate a level for an application place the cursor on the corresponding line and column with the arrow keys and press <ENTER>. A small symbol (•) is displayed to show that the option is active. To Disable, select the option and press <ENTER>. The small symbol (•) should disappear.

**F5 - HISTORIC MANAGEMENT**

**SAMM**

- F1 - ALARM MONITORING**
- F2 - ACCOUNTS MANAGEMENT**
- F3 - BILLING**
- F4 - SECURITY**
- F5 - HISTORIC MANAGEMENT**
- F6 - EXIT TO DOS**
- F7 - PASSWORD**
- F8 - GENERAL INFORMATION**

**HISTORIC MANAGEMENT**

**F5 - HISTORIC MANAGEMENT**

```
HISTORIC MANAGEMENT
1 - DELETE
2 - LISTS
3 - VIEW
4 - DATA TRANSFER
      <ESC> to exit
```

1 -DELETE

SAMM, each month, stores data in a new Directory on the hard disk. It is the sole responsibility of the operator to **Back up** the hard disk in a systematic way at least once every day.

The build up of old data can be kept on the hard disk. But, for practical and economical reasons, it becomes necessary, as long as one is sure that a back up exist and can be read, to purge this excess data from the hard disk.

When selecting 1 - DELETE, the sixteen oldest months of data accumulation are displayed for purging. Data of the current month and previous month are never put up for purging.

```
December 1993
January 1994
February 1994
March 1994
April 1994
May 1994
June 1994
July 1994
August 1994
```

Delete **December 1993?**

Are you sure [Y/N]: Y

Move the inverted video bar over the months to select the one to be erased and press <ENTER>. A new window is displayed specifying the selected month up for purging. enter "Y" or "N" for Yes or No to the question "Are you sure". Repeat the same process for all the months to erase.

If by mistake someone tries to erase the current period and the month before, SAMM will answer that there is no file to erase.

**HISTORIC MANAGEMENT**

2 -LISTS OF EVENTS

Selecting line 2 - LISTS bring the window:

HISTORIC MANAGEMENT		
1 -	DELETE	
2 -	LISTS	

EVENT LISTS		
ACCOUNT	From	: <b>35654</b>
	To	: <b>85496</b>
GROUP	1	: <b>MONTREAL</b>
	2	: <b>COMMERCE</b>
FROM	Date	: <b>94-05-09</b>
	Time	: <b>14:00</b>
TILL	Date	: <b>94-05-15</b>
	Time	: <b>16:00</b>
WINDOW	[Y/N]	: <b>Yes</b>
EVENT	Type	: <b>B</b>
	Code	:
EMERGENCY	[Y/N]	: <b>Yes</b>
REPORT	Title	: <b>REPORT -- FIRE EMERGENCY CALLS</b>
	Choice	: <b>2 -- SUMMARY BY CUSTOMER</b>
<ESC> Exit		

This menu is the only one to specify and print lists of events.

Enter the information as required. To change line, press <Enter>.

This menu is of the REPORT GENERATOR type. It implies a very precise control of the data to be printed.

The "WINDOW" option introduces a twist in report printing. If the answer is "No", then the report will produce all data of the type specified from the 94-05-09 at 14:00 to 94-05-15 at 16:00. But if the answer is "Yes" it will select only the data for the daily interval between the given dates.

So, in the above example, it is required to print a list of customers, from number 35654 to number 80496, which are commerce, located in Montreal, having made an emergency call between 14:00 and 16:00 hour from date 94-05-09 to date 94-05-15. This being an event of type B, let us refer to the table below.

**HISTORIC MANAGEMENT**

TYPE OF EVENTS TABLE	
1 .. 9	EVENT PRIORITY
A -	ALL PRIORITY
B -	EVENT NO PRIORITY
C -	FUTURE USE
D -	OPENING / CLOSING NOT SCHEDULED
E -	OPENING / CLOSING
F -	REPORT 24 HOUR
G -	NO PROCESSING
H -	WORK ORDER
I -	LATE IN/OUT DETECTION
J -	SPECIAL EVENT
K -	ACTIVE / INACTIVE ACCOUNT
L -	ALARM CODE UNKNOWN

When requested by the display to enter the type of event, one or more letters can be entered corresponding to one or more options. If the field is left blank, all type S of event will be printed.

Various alarm codes can be selected to print. To choose multiple non consecutive codes, enter these codes, parted by a comma. To choose an interval of codes, enter the first and the last code, parted by two (2) dots (..). To print all codes, leave the field blank.

In the field "REPORT TITLE" specify the title of the report. This field can be left blank and no title will be printed.

The last field is an option to print, detailed, summary, by customer or chronological reports.

1 - DETAILED BY ACCOUNT
2 - SUMMARY BY ACCOUNT

3 -VIEW

Events for an account may be displayed by selecting 3 - VIEW

HISTORIC MANAGEMENT	
1 -	DELETE
2 -	LISTS
3 -	VIEW
ACCOUNT NUMBER : <u>1234</u>	
<Esc> to exit	

**HISTORIC MANAGEMENT**

To view the events in the account file, enter the number (underlined characters) and press <enter>. By default the current file is displayed. If the current file is empty, SAMM will go back in time until something is found. If no event is available for this account a Beep will sound and this message is displayed:

No event for this account

If events are present in the file it is displayed:

```

                                ACCOUNT EVENTS DISPLAY

SECURITY INC.

ACCOUNT      DATE          EVENT TIME          OPERATOR
0            90-01-03      15:02:40 - 15:02:43  Danny Lalonde

CODE AND DEFINITION

123 TEST

COMMENTS :

                                <ESC> Exit <PGDN> Next          <PGUP> Previous
```

For each consultation, the most recent event is displayed. To look for other events, use the following keys:

<Page Down>, <Page Up>	Next or previous event
<Ctrl-Page Down>	Event of next date)
<Ctrl-Page up>	Event of previous date
<Home>, <End>	First event of period. Last event of period
<UP>, <DOWN>	Page travel
<+> <->	Next month, Previous month

4 -DATA TRANSFER

Data Transfer option sends data related to a group or groups of accounts to a remote Central site.

The following elements are required at each site for data transfer:

computer 286 and up  
Modem 14.4Kbs  
SAMM software

---

**HISTORIC MANAGEMENT**

Operations at the alarm processing Central from where transfer originates.

- . Define in GROUP MANAGEMENT -> F8, 4 a group for all accounts with the same affinity.
- . Insert the group in ALARM COMPANIES MAINTENANCE -> F8, 6
- . Identify the group in account file, F2-ACCOUNT MANAGEMENT. Page 7: Account installation information

Operations at the receiving Central

In F8,1 AUTOMATIC SAVE FOR ALL EVENTS enter <Yes>. Enabling this function places SAMM in reception mode from midnight (0:00) to 05:00 each day at the Central where data reception is to occur.

All data received from alarm processing Central go directly to file. No new alarm processing is required nor may be done on this data.

Note: if this option is set at the receiving Central, SAMM can't be used there to Alarm Monitoring, because all data received from the COM ports will be immediately written to disk, without warnings to the operator.

Begin transfer by pressing F5, 4.

The transfer process is as follows:

- 1 - initialize modem
- 2 - prepare transfer
- 3 - call Central at remote site
- 4 - transfer data files
- 5 - update files at remote Central
- 6 - repeat steps 2 to 5 for all groups

SAMM transfer all data from last fully completed transfer up to present time.

Progress is displayed during transfer.

If transfer problem occurs, SAMM will try a second time from the point of full completion. If second trial does not complete a work order is printed for the group with full details.

Problems to look for:

- . Line busy
- . No dial tone
- . No answer at remote Central
- . transfer stopped
- . communication error
- . modem no answer

After transfer, modems shut communication and SAMM process data update.

Detailed information on transfer process is available in event file for account zero (0).

**F6 - EXIT TO DOS**

**SAMM**

- F1 - ALARM MONITORING**
- F2 - ACCOUNTS MANAGEMENT**
- F3 - BILLING**
- F4 - SECURITY**
- F5 - HISTORIC MANAGEMENT**
- F6 - EXIT TO DOS**
- F7 - PASSWORD**
- F8 - GENERAL INFORMATION**

**F6 - EXIT TO DOS**

This option deactivate SAMM and transfers command to the DOS Operating system (DOS, C:\>). To reactivate SAMM enter "SAMM" and press <ENTER>. The main menu will then be displayed.

**F7 - PASSWORD**

**SAMM**

- F1 - ALARM PROCESSING**
- F2 - ACCOUNTS MANAGEMENT**
- F3 - BILLING**
- F4 - SECURITY**
- F5 - HISTORIC MANAGEMENT**
- F6 - EXIT TO DOS**
- F7 - PASSWORD**
- F8 - GENERAL INFORMATION**

**F7 - PASSWORD**

Operator number :                      Press <ENTER> to logoff
--

Each time a person signs on in SAMM she or he must activate her or his access to the system.

Example:                      Operator number : 1              Press <ENTER> to logoff  
   Password : DANNY <ENTER>

NOTE:      To lock SAMM, press <ENTER> to the question "Operator number".

Each operator can change his password simply by entering the word "SET"

Example:                      Operator name : 1  
   Password : SET  
   Enter your old password: DANNY  
   Enter your new password: TITANIC  
   Enter again: TITANIC

When entering password the letters are masked by (••••••) to prevent onlookers to grasp this vital information.

**F8- GENERAL INFORMATION**

**SAMM**

- F1 - ALARM MONITORING**
- F2 - ACCOUNTS MANAGEMENT**
- F3 - BILLING**
- F4 - SECURITY**
- F5 - HISTORIC MANAGEMENT**
- F6 - EXIT TO DOS**
- F7 - PASSWORD**
- F8 - GENERAL INFORMATION**

**GENERAL INFORMATION**

**F8 - GENERAL INFORMATION**

System parameters can be adjusted to your needs. To change line use the arrow keys or the <ENTER> key.

GENERAL INFORMATION	
1 -	ALARM MONITORING INFORMATION
2 -	BILLING INFORMATION
3 -	BILLING DESCRIPTION
4 -	GROUP MANAGEMENT
5 -	ADD OR MODIFY A CITY
6 -	ALARM COMPANIES MAINTENANCE
<ESC> To Exit	

**1 - ALARM MONITORING INFORMATION**

ALARM MONITORING INFORMATION	
AUTOMATIC OPENING/CLOSING SORT (Y/N)	: No
INTERVAL TIME TO OPENING/CLOSING SORT	: 00:30
INTERVAL TIME TO LINE UP BUZZER (3..30)	: 3
DISPLAY LATE OPENING DETECTION [Y/N]	: No
DEFAULT OPENING/CLOSING DELAY	: 00:30
FAST SAVE EVENT [Y/N]	: Yes
AUTOMATIC SAVE EVENT IF ACCOUNT HAS SAME PRIORITY [Y/N]	: Yes
AUTOMATIC SAVE FOR ALL EVENTS	: No
AUTOMATIC SAVE EVENT FOR INVALID ACCOUNT NUMBER	: Yes
PRINTER: ACCOUNT / EVENT LIST PRINTER (1 - 2 - 3)	: 1
BILLING (1 - 2 - 3)	: 2
ALARM MONITORING (0 - 1 - 2 - 3)	: 0
WORK ORDER (0 - 1 - 2 - 3)	: 3
<ESC> Exit	

**AUTOMATIC OPENING/CLOSING SORT (Y/N): N**

This option tells the system to check the Opening/Closing automatically .

When this option becomes active, a check is made according to the specified interval. If S.A.M.M detects a late Opening or Closing, the event will be stored in the waiting file (See APPENDIX). Three (3) specifications can be made for this event:

- DETECTION OF A LATE OPENING
- CLOSED FOR THE DAY
- DETECTION OF A LATE CLOSING

---

**GENERAL INFORMATION**

**INTERVAL TIME TO OPEN/CLOSE SORT: 00:30**

This option specifies to the system the interval to automatically check for Open/Close. If a thirty (30) minute interval is selected, the verification will be made every half hour plus one minute.

Example: 6:01 hour, 6:31 hour, etc.

**INTERVAL TIME TO LINE UP BUZZER (3..30)**

When an event enters the waiting file a beeping sound is heard at regular interval. The delay between beeping sounds is adjustable from three (3) to thirty (30) seconds.

**DISPLAY LATE OPENING DETECTION [Y/N]: N**

On a positive answer to this question (Y) Yes, the verification of Opening will be displayed with the message:

- DETECTION OF A LATE OPENING

A negative answer (N) No, will cause the verification to go undisplayed and the message will be:

- CLOSED FOR THE DAY

**DEFAULT OPENING/CLOSING DELAY: 00:30**

This defines the default delay for Opening/Closing for the customer.

**FAST TERMINATION EVENTS PROCESSING [Y/N]**

If the answer to this question is "Yes" the events will be saved by pressing key <F1>. A negative answer "No" will deactivate the <F1> key. To save the event will then require to use key <F7> to move the bar down to "SAVE EVENT" and press <Enter>

A "Yes" also tellsSAMM to get ready for night data reception via modem between (00:00 à 06:00)

**AUTOMATIC SAVE EVENT IF ACCOUNT HAS SAME PRIORITY [Y/N]**

When SAMM receives many alarms from the same account, it checks their priority level.

Option YES: SAMM displays the first event and saves the others..

Option NO: SAMM displays the first event and set the others at priority level 10.

This function speeds up alarm processing while preventing mistakes if many events happen at the same time for the same account.

**AUTOMATIC SAVEFOR ALL EVENTS [Y/N]**

If option is set to yes, all Events are saved with no processing.

**AUTOMATIC SAVE EVENT FOR INVALID ACCOUNT NUMBER [Y/N]**

If option set to yes, all Events with undefined a/n are saved with no processing to a/n file.

All saved Events for an undefined a/n will be transferred to a/n when it becomes defined.

<b>ACCOUNT EVENT LIST PRINTER NUMBER (1 - 2 - 3)</b>	<b>: 1</b>
<b>BILLING PRINTER NUMBER (1 - 2 - 3)</b>	<b>: 2</b>
<b>ALARM MONITORING PRINTER NUMBER (0 - 1 - 2 - 3)</b>	<b>: 0</b>
<b>WORK ORDER PRINTER NUMBER (0 - 1 - 2 - 3)</b>	<b>: 3</b>

A computer can have up to three (3) printer ports (LPT1, LPT2, LPT3). If such a computer is available, various lists can be printed on selected printers.

NOTE: To deactivate a printer for SAMM, enter code zero (0).

**GENERAL INFORMATION**

**2 - BILLING INFORMATION**

BILLING INFORMATION	
Company name	: DOMESTICA INC.
Address	: 5144, HANOVER
City (Province/State)	: MONTREAL, (QUEBEC)
Postal code/Zip code	: H3W 2L1
Print company name	: Yes
Tax 2 on Tax 1	: No
Invoice number	: 10094
Tax 1	% 7.00
Tax 2	% 4.00
Tax number 1	: Z100123456
Tax number 2	: 1006784567VB0001XX
<ESC> Exit	

This option gathers all billing information related to the company. Enter the required fields. To change field, use the arrow keys or press <ENTER>.

The field "print company" tells the system whether or not the name of the company should be printed as letterhead of the invoices. If the paper used to print invoices already has preprinted letterheads, enter "N".

The "Invoice number" field is set at one (1) by the system until the billing process starts or until it is set at a new figure to correspond with the accounting procedure. This Invoice number can be modified only when it is equal to one (1). For accounting security purposes it is impossible to modify when it is different from one (1).

Answering "Y" (Yes) to field "Tax 2 over Tax 1" tells the system that Tax 2 will be computed on the total of the invoice, including Tax 1. If the answer is "N" for No, means that Tax 2 is computed only on the total of the invoice, excluding Tax 1.

**3.- BILLING DESCRIPTION**

Description of Services and their General Ledger number.

SERVICE DESCRIPTION	GENERAL LEDGER NUMBER
MONITORING FEE	1401
CONTROL OPENING / CLOSING	1411
SERVICE CONTRACT	1421
.....	.....
.....	.....
.....	.....
<ESC> Exit	

Ten lines are available to enter services with their # G/L. Scroll up and down from the Description field with the arrow keys and from the Description field to the # G/L field by pressing Enter. <F2> Deletes a line and <F3> To Insert a new line.

**GENERAL INFORMATION**

**4.- GROUP MANAGEMENT**

GROUP MANAGEMENT	
1	- ADD GROUP
2	- MODIFY GROUP
3	- AUTO WORK SCHEDULE
4	- DELETE GROUP
5	- DISPLAY GROUPS
6	- PRINT GROUPS
<ESC> Exit	

GROUP MANAGEMENT (creation, modification, auto work schedule, erase, display and print) is there to bring together customers who have something in common. This feature can be most useful when reporting on customer lists and events. Each group is presented with a detailed description to help identify it. Up to one thousand different groups (1000) can exist in SAMM.

Pressing key <F5> prints the list of all groups.

GROUP MANAGEMENT	
1	- ADD GROUP

GROUP NAME TO ADD : <u>COMMERCE</u>
-------------------------------------

Write the name of the new group (underlined characters) and press <ENTER>.

GROUP MANAGEMENT	
1	- ADD GROUP

GROUP NAME	:	<u>COMMERCE</u>
DEFINITION	:	<u>COMMERCE SUPERVISION</u>
.Insert...		

Write the description of the new group (underlined characters) and press <ENTER> to end the operation. No definition is required.

**GENERAL INFORMATION**

---

GROUP MANAGEMENT	
1	- ADD GROUP
2	- <u>MODIFY GROUP</u>

GROUP NAME TO ADD : <u>COMMERCE</u>
-------------------------------------

Write the name of the group to modify (underlined characters) and press <ENTER>

GROUP MANAGEMENT	
1	- ADD GROUP
2	- <u>MODIFY GROUP</u>

GROUP NAME	:	<u>COMMERCE</u>
DEFINITION	:	<u>COMMERCE SUPERVISION</u>
		.Insert...

Only the definition of the group can be modified, not the name. Enter the definition and press <ENTER> to end the operation.

GROUP MANAGEMENT	
1	- ADD GROUP
2	- <u>MODIFY GROUP</u>
3	- <u>AUTO WORK SCHEDULE</u>

GROUP NAME TO AUTO WORK SCHEDULE : <u>NOEL</u>
--

Write the group name for automatic (AUTO WORK) schedule (underlined characters) and press <ENTER>.

GROUP MANAGEMENT	
1	- ADD GROUP
2	- <u>MODIFY GROUP</u>
3	- <u>AUTO WORK SCHEDULE</u>

**GENERAL INFORMATION**

```
INTERVAL DATE FOR THE GROUP: NOEL
DEFINITION : CHRISTMAS SCHEDULE
DATES :           FROM           95-12-06
(Y Y/M M/D D)    TILL           95-12-13

<ESC> Exit  <F2> Delete  <ENTER> ACK
```

Write the date interval (underlined characters). Press <ENTER> or the arrow key to step down to next line. Press <ENTER> on the last line to validate the operation. To change the previous line move back with the arrow key and repeat the process.

```
GROUP MANAGEMENT

1 - ADD GROUP
2 - MODIFY GROUP
3 - AUTO WORK SCHEDULE
4 - DELETE GROUP

GROUP NAME TO DELETE : COMMERCE
```

Write the name of the group to delete (underlined characters) and press <ENTER>.

```
GROUP MANAGEMENT

1 - ADD GROUP
2 - MODIFY GROUP
3 - AUTO WORK SCHEDULE
4 - DELETE GROUP

GROUP NAME: COMMERCE
DEFINITION : COMMERCE SUPERVISION
Are you sure [Y/N] :Y
```

Write "Y" for Yes (underlined characters) or "N" for No as need be.

**GENERAL INFORMATION**

DISPLAY GROUP		AUTO WORK SCHEDULE	
NAME	DEFINITION	FROM	TO
COMMERCE	COMMERCE SUPERVISION		
CTRLS	OPENING / CLOSING CONTROL		
FAMILY	FAMILY RESIDENCE		
NOEL	CHRISTMAS SCHEDULE	95-12-06	95-12-23
MOIS01	JANUARY INVOICES		
MOIS02	FEBRUARY INVOICES		
MOIS03	MARCH INVOICES		
MOIS04	APRIL INVOICES		
MOIS05	MAY INVOICES		
MOIS06	JUNE INVOICES		
<ESC> Exit		<RETURN> Select/Unselect	

This menu displays the groups with the related definition. Ten groups at a time are displayed. To pursue the viewing use the arrow keys or the <+> / <-> keys to go forward or backward.

**PRINT GROUPS**

This function offers no choice. It prints the groups.

**5.- ADD OR MODIFY A CITY**

Having selected option 4 of GENERAL INFORMATION, brings the following display:

CITY NUMBER TO MODIFY	:	<u>31</u>
<F9> Search		<Enter> Add

The same menu applies to Add or Modify a city. If the object is to add a new city to the repertoire, leave a blank field and press Enter. To modify a city enter the reference number and press <Enter>.

The file of a city to modify can also be reached by the search menu <F9>.

SEARCH NAME	:	<u>MONT</u>
<F9> Search		<Enter> Add

Enter the name or part of the name of the city, (underlined characters) and press <F9> to start the search. A display of five (5) names fitting the key will be presented. If the search is not final, selecting one of the row and pressing <F9> again will approach the target more closely. But for now suppose that our city is number 31: MONT-BRASIL; select it and press Enter.

**GENERAL INFORMATION**

```
20          MONTANA
31          MONT-BRASIL
42          MONTOBAN
53          MONTSEGUR
60          MONT-SINAI

          <F9> Search          <Enter> Add
```

The final display for creating data about a new city or modifying an existing one appears like this:

```
CITY, PROVINCE      : OTTAWA, ONTARIO
POLICE              : 911
FIRE DEPT.         : 911
EMERGENCY          : 911

<ESC> Exit  <PGDN> / <PDUP> Paging
```

The file about a city can be created and/or modify. It cannot be erased. If by mistake, a city has been created twice, use one of the names and change the other.

If a city changes its information, it must be done here. All customer related files will be automatically updated.

**6.- ALARM COMPANIES MAINTENANCE**

This function displays a menu for installer file maintenance:

```
1 - ADD AN ALARM COMPANY
2 - MODIFY AN ALARM COMPANY
3 - DELETE AN ALARM COMPANY
4 - PRINT THE ALARM COMPANY

          <ESC> to exit
```

Option 1-ADD AN ALARM COMPANY displays a window to insert a new installer:

```
ALARM COMPANY NUMBER: 123

Name      : SECURITY INC.
Phone 1   : 222-3333
Phone 2   : 555-6666
Modem     : 444-1111
Account record : No transfer
Group name : MCA
          <ESC> to exit
```

To change line press <ENTER> or press arrow keys. The modem number is used to transfer events from accounts of this customer to his computer by way of a modem.

---

**GENERAL INFORMATION**

A new function will be offered in a future version: account record transfert.

The account record transfer offers three options:

- |               |   |                  |
|---------------|---|------------------|
| 1             | - | To alarm company |
| 2             | - | To central       |
| 3             | - | No transfer      |
| <ESC> to exit |   |                  |

1. Transfer modified accounts from event processing Central to remote computer.
2. Transfer modified accounts from remote computer to event processing Central.
3. No transfer.

The group name, if one is to be used, must have been defined before this stage. See GROUP MANAGEMENT in this chapter.

To MODIFY an installer file, select option 2. SAMM will ask for the installer number.

Enter the installer number. If this number is unknown use Help key <F9> to look at the numbers already used. If list is empty, a beep will sound.

When choosing option 4 - LIST, all installer files will be printed, one per line.

**APPENDIXES**

## APPENDIX A --- RECEIVERS

Various types of receivers can be linked to a computer under the control of SAMM. Each receiver is identified by a precise number attached to it from the start.

### IMPORTANT

It is of the utmost importance that the receiver configuration be held correctly so that the software accepts the events correctly.

### 1 - SESCOA 3000R


Control card switches configuration: (page 8 of the manual)

Switch 1 = Not used	Switch 5 = Not used
Switch 2 = Open (On)	Switch 6 = Closed (Off)
Switch 3 = Open (On)	Switch 7 = Not used
Switch 4 = Not used	Switch 8 = Open (On)

NOTE: Special Prom required, contact your local distributor.

Cable configuration between SESCOA and the computer:

SESCOA 3000R

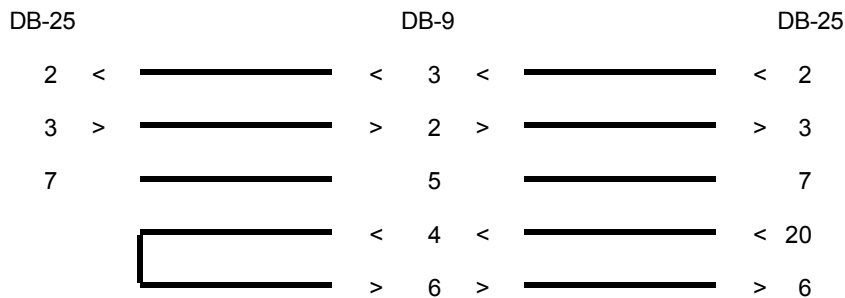

2 - Ademco 685

PROM 690 no 6 configuration (page 66 of the manual) Burn position X

1 2 3 4 5 6 7 8

						X	
--	--	--	--	--	--	---	--

Burn position 7 for 1200 bauds  
Positions 1 to 6 and 8 are Not used

PROM 690 no 7 configuration (page 66 of the manual)

1 2 3 4 5 6 7 8

X		X		X			X
---	--	---	--	---	--	--	---


Burn positions 1,3,5,8

Positions 1 ACK/NAK  
Positions 3 MANUAL MODE NO COMPUTER  
Positions 5 CLOSE ALARM  
Positions 8 FORMAT 4X2  
Positions 2,4,6,7 are not used

**APPENDIX A --- RECEIVERS**

Cable configuration between Ademco receiver and the computer:

Ademco 685

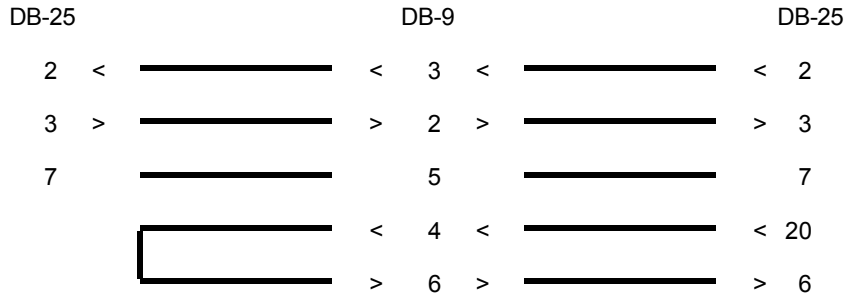

**3 - SurGard D-VAC & DIGITAL**

Line card switches configuration:

Switch 1 = Not used  
Switch 2 = Not used  
Switch 3 = Not used

Switch 4 = Not used  
Switch 5 = Open (On)  
Switch 6 = Open (On)


CPM card switches configuration:

Switch 1 = Close (Off)  
Switch 2 = Close  
Switch 3 = Close

Switch 4 = Not used  
Switch 5 = Open (On)  
Switch 6 = Open (On)

Cable configuration between Sur Gard receiver and the computer:

Sur Gard

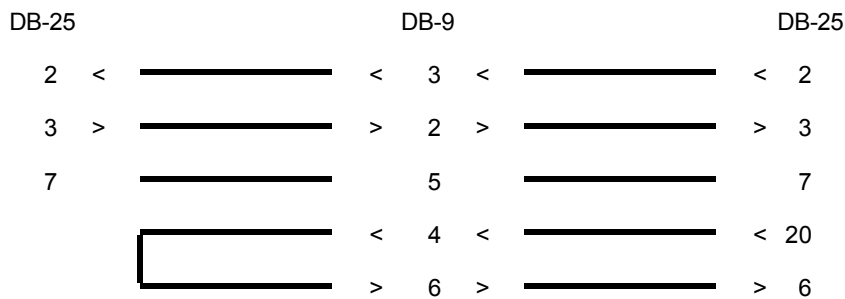

---

**APPENDIX A --- RECEIVERS**

4 - Heartbeat of the receiver

Some receivers transmit to the computer, every minute, a signal to show they are still "alive". This is called a "heartbeat". If the receiver fails, the monitoring software is readily warned of this fact. When SAMM is linked to a receiver with that capability, and the heartbeat signal ceases, a message from account number zero "0" is displayed:

ACOM1	(RECEIVER COM1 ABSENT)
ACOM2	(RECEIVER COM2 ABSENT)
ACOM3	(RECEIVER COM3 ABSENT)
ACOM4	(RECEIVER COM4 ABSENT)
	OR
	RCOM1 (RECEIVER COM1 OPERATIONAL)
	RCOM2 (RECEIVER COM2 OPERATIONAL)
	RCOM3 (RECEIVER COM3 OPERATIONAL)
	RCOM4 (RECEIVER COM4 OPERATIONAL)

EXAMPLE : A SURGARD receiver is connected to serial port COM2 and it fails. The signal received is:

```
0000  ACOM2 >  SUR GARD ABSENT
```

It is of the utmost importance to create an account number zero "0" and to define the codes accordingly.

NOTE: If you own or buy a receiver which is not already defined in SAMM, contact your local distributor to get the necessary upgrade code.

5 - Heartbeat of SAMM

SAMM, every minute, sends a heartbeat signal to say it is "alive".

It also checks the events printer to make sure it is not offline, missing paper or at fault. If it occurs, SAMM considers this important and ceases to send its heartbeat to warn the operator by triggering the Watch dog.

This heartbeat signal is sent to COM1.

To detect the signal connect a Watch Dog to COM1.

See Watch Dog operating instructions for more details.

The conditions necessary to trigger the Watch Dog:

- . SAMM does not run.
- . The computer has a hardware failure.
- . The computer has a black out or is turned off.
- . The printer of events, linked to the computer port, is out of paper, is offline or at fault.
- . A black out on the Watch Dog will prevent a visual and audible signal but the link to the alarm panel will warn of the problem.

The MCD-TLR receiver can send a heartbeat signal every 30 second. This signal carries information about its own printer. It can warn if the printer is out of paper, is offline or at fault. SAMM associates this information to its own heartbeat. It will stop its heartbeat if the MCDI-TLR and/or MCDI-TLR+ signal is not present.

## APPENDIX B --- TEXT EDITOR

The cursor appears on the screen as a blinking dash giving his horizontal position.

The vertical position of the cursor is given by a reverse video bar. The length of the bar gives the maximum size of the field.

### Arrow keys

The arrow keys are used to move the cursor character by character (arrow left, arrow right) or line by line (arrow up, arrow down) in the page.

### End

Place the cursor at the end of the field.

### Home

Place the cursor at the beginning of the field.

### Escape

In most of the menus, the "<ESC> To Exit" command appears. This key brings back the previous menu.

By pressing this key, the file will be saved and the previous menu will appear. This is not the case for "DATE AND TIME".

### Page Up/Down (Customer, Alarm processing)

The Page Up / Page Down keys place the cursor on the previous page (Page Up) or the next page (Page Down).

### Screen Up/Down (Group)

The keys Page Up (-) and Page Down (+), place the cursor on the first line of the screen for the displays of Alarm codes, Customers and Groups. Then these keys have the text rolling one screen at a time.

### Word Left/Right

The Word keys (Ctrl-Arrow-Left) and (Ctrl-Arrow-Right) move the cursor from its present position, over to the beginning of the preceding word (Ctrl-Arrow-Left) or to the beginning of the following word (Ctrl-Arrow-Right).

### Customer Next/Previous, Date Next/Previous

These keys give access to the next customer or date (Ctrl-Page Down) and to the previous customer or date (Ctrl-Pg Up).

---

**APPENDIX B --- TEXT EDITOR**

**Backspace**

Pressing the "Backspace" key moves the cursor backward, to the left, character by character, erasing them. The characters to the right are pulled by the cursor over the erased blanks.

**Delete**

The "Delete" key erases the characters to the right, pulling the following string over the erased blanks.

**Insert**

By default, SAMM work in "Insert " mode. This means that the original text is pushed to the right as new text is entered.

In "Overwrite mode" the original text is written over as new text is entered.

In either mode, the message "Overwrite" or "Insert", is displayed at the top right part of most menus.

To change mode press the "Insert" key.

**Erase**

The <Ctrl-Y> key erases the field completely. The <Ctrl-End> key erases the line completely to the right of the cursor position.

**Command summary**

The command summary of all the keys described in the Editor is displayed by pressing the "CTRL-A" key, in the presence of the inverted video bar. This bar is present whenever the Edit mode is in control at the menu stage.

---

**APPENDIX C --- MESSAGES FROM S.A.M.M.**

**APPENDIX C --- MESSAGES FROM SAMM**

Complete list of messages available from SAMM. Most messages have a very clear meaning. However others need a very special attention.

- ACCOUNT NUMBER NOT VALID.
- ACCOUNT NUMBER ALREADY IN USE.
- ACCOUNT DOES NOT EXIST.
- ACCOUNT HAS NO EVENT IN FILE.
- INVALID GROUP NAME.

Only alphanumeric or underlined characters can be used.

- GROUP NAME DOES NOT EXIST.
- GROUP NAME ALREADY IN USE.
- USER FILE NOT FOUND.

Call technical support.

- YOUR REQUEST TO CHANGE THE PASSWORD HAS BEEN DENIED.
- YOUR REQUEST TOO ACCESS SAMM HAS BEEN DENIED.
- INVALID INTERVAL.
- INVALID DATE.
- ALARM CODE NOT FOUND.
- SAVE THE CURRENT EVENT BEFORE EXITING.
- SAVE THE CURRENT EVENT BEFORE TOGGLE MODE.
- THE PEND. IS FULL.
- THE PEND. IS EMPTY.
- RUNTIME ERROR

Call technical support.

- VERIFY THE PRINTER PLEASE.

Check if printer is operational Electrical power on, data cable is correctly connected, printer ready....

---

**APPENDIX C --- MESSAGES FROM S.A.M.M.**

---

- O N E M O M E N T P L E A S E

When an event is received, SAMM pre-processes it and while doing the work, displays the message. In this way, an operator using a less powerful computer or an overloaded, one might think it abnormal to feel small delays in processing, if not warned by the message.

- OPENING/CLOSING SORT: ACCOUNT NUMBER XXX.

Every 15 minutes, SAMM SR verifies Opening/Closing. Late Openings or Closings are written in the account file. The same applies for AUTOTESTS NOT RECEIVED. Report may be displayed or printed as needed.

- BUSY BY ANOTHER OPERATOR

An attempt to access a locked file because another operator is using it or because it has been left in a locked status by an emergency exit of some sort.

When the message is the result of more than one user trying to access data limited to a single user at a time, be sure to wait for the current user to quit before trying to access the system again.

If the message is the result of an emergency exit of some sort, use a Utility program to unlock files. Quit SAMM and go to DOS. In the SAMM directory locate and run RAZSAMM.

```
CD\SAMM.DTA<ENTER>  
RAZSAMM<ENTER>
```

Restart SAMM and resume operations.

- TO MANY USERS IN ALARM MONITORING

Same cause and solution as for the previous message

---

APPENDIX D --- SUMMARY OF COMMANDS

APPENDIX D --- SUMMARY OF COMMANDS

F1 - ALARM MONITORING (Hot key)

- F1 - Save event (On disk)
- F2 - Event in PEND.
- F3 - site plan / Misc.
- F4 - Account files
- F5 - Comment / Passcard
- F6 - Late to close / Follow up
- F7 - Priority action display
- F8 - Utilities

delay

- 1 - Memo
- 2 - Opening / Closing

display

- 3 - Find account
- 4 - Account events
- 5 - Set time
- 6 - Armed/Disarmed syst.
- 7 - Idle Mode

- F9 - Last 10 events
- F10 - Manual / automatic toggle

- Ctrl A - Help
- Ctrl S - Work order
- Ctrl V - Inactive account

- F10 - Print the list

F2 - ACCOUNT MANAGEMENT

- 1 - Add
- 2 - Modify
- 3 - Delete
- 4 - Change the number
- 5 - Lists

F3 - BILLING

- 1 - Address labels
- 2 - Automatic billing
- 3 - Billing summary
- 4 - Summary of all payments
- 5 - Summary of all last payments

F4 - SECURITY

- 1 - Operator's management
- 2 - Operator's message
- 3 - Security setup

F5 - HISTORIC MANAGEMENT

F6 - EXIT TO DOS

F7 - PASSWORD

F8 - GENERAL INFORMATION

- 1 - Alarm monitoring information
- 2 - Billing information
- 3 - Billing description
- 4 - Groups management

- 1 - Add group
- 2 - Modify group
- 3 - Auto work schedule
- 4 - Delete group
- 5 - Display groups
- 6 - Print groups

- 5 - Add of modify a city
- 6 - Alarm companies maintenance

<ALT> DISPLAY THE LAST EVENT (Hot key)

## APPENDIX E --- DATABASE

The Database is quite useful for a customer search.

the search can be conducted in various ways:

### - NUMBER

Enter the customer number and press <ENTER>.

To step over to the next customer, press <Ctrl-Pg Dn> or <Ctrl-Pg Up> to step back to the previous customer. By using these keys for the Opening/Closing delay, will give the next or previous customer who has Opening/Closing control.

### - NAME, ADDRESS

If the customer does not have his number, the search can be made using his name or his address.

Example: FINANCIAL GROUP MCD  
31, LEO ST

This search does not take into account capital, small or blank letters.

Example: NAME : Financial group MCD  
ADDRESS : 31, Leo St.

A part of the name or the address is also sufficient for the search.

Example: NAME : MCD, Group, Financial, Etc.  
ADDRESS : 31, Leo, St., Etc.

To step over to next or previous customer press the keys <Ctrl Pg Dn.> or <CtrlPgUp>. The search will stop on the first customer with the right character sequence (darker characters).

Example 1: Write "ANCIAL" and <ENTER>

1) **Financial** of the future inc. <Ctrl Pg Up>

2) **Financial** group MCD

Example 2: Write "10" et <ENTER>

1) **10** Leo St<Ctrl Pg Dn>

2) **12105** St.-Lawrence

---

APPENDIX E --- DATABASE

- TELEPHONE

The search for telephone numbers jumps over separators like the dash "-", parentheses or spaces.

1 (514) 430-6421 = 15144306421

A part of the telephone number can be used as the key for the search.

6421, 642, 421, 3064, etc.

To step over to next or previous customer press the keys <Ctrl PgDn> or <CtrlPgUp>. The search will stop on the first customer with the right character sequence in the telephone number (darker characters).

Example: Write "430"

1) 1-514-**430**-6421 <Ctrl PgUp>

2) 1-819-538-**4309**

**NOTE:** When doing a search by name, address, or telephone number for the **Opening/Closing delays**, the stepping up or down in the file is done in exactly the same way. The search will stop on the first sequence corresponding to the specified key but only for those customers with **Opening/Closing control**.

Example: Write "ROUP" <ENTER>

1) FINANCIAL **GROUP** GII <Ctrl PgUp> (Control O/C)

2) NATIONALE BALLET **TROUPE** (No O/C control - does not stop)

3) BATTLE **TROUPE** INC (Control O/C - stops at)

## **APPENDIX F --- WAITING FILE**

SAMM is able to receive events from the receiver at all time. When an event is received, the message: "ONE MOMENT PLEASE." is displayed.. SAMM will accept the event, give a priority, and place it in the waiting file.

When there is one or more events in the waiting file, a digit like "3" is displayed at the bottom of the window. The number of digits corresponds to the number of events in the file. The value of the digit indicates the priority level. On a color display the red bar is a priority 1, the yellow bar a priority 2, the green bar a priority 3 and the white bar equals no priority at all.

To get to these events, activate the automatic mode.

**APPENDIX G --- REPORT SAMPLES**

**APPENDIX G --- REPORT SAMPLES**

---

WORK ORDER

Account: 123

Date: 90-04-21

Time: 23:30:39

Account: ABC INDUSTRIES INC.  
23 8th AVENUE  
LAKEWOOD, ONTARIO  
L0G 3W0 TEL.: 613 289-1029

INSTALLATION DATE. : 95-12-18

INFORMATION : FIRE/BREAK IN - OPEN/CLOSE CONTROL  
: PC-1000  
:  
:  
:

RECEIVER PHONE NO : 345-4000  
PANEL PHONE NO : 236-000i5

CODE : Work order on customer's request

PROBLEM DESCRIPTION : Operator 23

The alarm system operates for no reason.

-----  
TECHNICIAN : \_\_\_\_\_ DATE : \_\_\_\_\_  
TIME : \_\_\_\_\_

TIME WORKED : \_\_\_\_\_ Hrs

PARTS USED:

QUANTITY	PARTS NUMBER	DESCRIPTION
_____	_____	_____
_____	_____	_____

WORK DONE :  
\_\_\_\_\_  
\_\_\_\_\_

SIGNATURE : \_\_\_\_\_

APPENDIX G --- REPORT SAMPLES

DETAILED LIST : GENERAL INFORMATION

10 SECURITY INC.

ACCOUNT INFORMATION :

ABC INDUSTRIES INC.  
123 Glassbed  
Five Rivers (BC)  
P7H 2E1  
A - 666-6666 / 666-6667

EMERGENCY PHONE NUMBERS :

C - Police : 911  
D - Fire Dept. : 911  
E - Emergency : 911  
F - Security

PERMANENT MEMO :

After 22h00, call police

RESPONSIBLE NOTIFICATION INFORMATION:

G -	George Fast	Owner	888-8888
H -	Doc Mullins	Vice-President	999-9999
I -	Amy Gold	Director	111-1111

WORK SCHEDULE :

		Sun	Mon	Tue	Wed	Thu	Fri	Sat	Active
Open	1 :		07:00	07:00	07:00	07:00	07:00		Yes *
Close	1 :		17:00	17:00	17:00	17:00	17:00		
Open	2 :		20:00	20:00	20:00	20:00			Yes *
Close	2 :		22:00	22:00	22:00	22:00			
Open	3 :								Yes *
Close	3 :								
Open	4 :								No
Close	4 :								
Open	5 :								No
Close	5 :								

INSTALLATION INFORMATION:

Installation date : 91-09-15  
 Information : FIRE\THEFT\PANIC\TEMP  
 : PC3000  
 Receiver phone no. : 666-7777  
 Panel phone no : 333-2222

GROUP LIST:

COMMERCE CTRLS MOIS09

APPENDIX G --- REPORT SAMPLES

DETAILED LIST : (SECOND PART)

10 SECURITY INC.  
ALARM CODES INFORMATION :

CODE	DESCRIPTION	T	PRIORITY ACTION
00	Low battery		
10	Fire	1	ABDIJH
20	Panic	1	C
30..33	Break in office	2	ABCIJH
34,35	Break in warehouse south door	2	ABCIJH
36,37	Break in warehouse west door	2	ABCIJH
40..44	Open	I	ABIJH
50..54	Close	O	ABIJH
60	High temperature in refrigerator	1	IJH

-----  
10 92-03-02

10 SECURITY INC.  
ID INFORMATION

CODE	NAME	PASSWORD
40,50	AB Gold	4564
41,51	G Monty	6786
42,52	Doc Mullins	4576
43,53	Stef Willbanks	3498
44,54	Ann Blurr	4590

-----  
10 95-12-14

**APPENDIX G --- REPORT SAMPLES**

---

ACCOUNT LISTS (SUMMARY)  
ABC ALARM INC.  
21 FEBRUARY 1992

NUMBER	NAME AND ADDRESS	TELEPHONE
123	ABC INDUSTRIES INC. 140 BREAKDOWN ST. WILLFORD, NFL A0S 1T	444-4444 555-5555
334	HUBE PAULUS 145 BLANKS NORFOLK, VIRGINIA 75150	(403) 666-6666 777-7777

---

APPENDIX G --- REPORT SAMPLES

ADDRESS LABELS

ALBERT BALD  
23 8e AVENUE  
NY, NY  
12345

GUS ZED.  
23 8e AVENUE  
NY, NY  
12345

FILLY LARSEN  
356 DE LA BASTILLE  
BOISBRIAND, QUEBEC  
J7H 1A7

ARTHUR BLOCK  
87 MAIN  
WILSON, ONTARIO  
K0G 3S5

JECKYL INDUSTRIES INC.  
31 POOLROOM  
LA VIOLA, ONTARIO  
MOG 3L8

**APPENDIX G --- REPORT SAMPLES**

---

INVOICE 92-08-06 1

TERM : PAYABLE ON RECEPTION  
CUSTOMER : 1111111

Sylvia St.-Moore  
23 Lartic  
Proper (NB)  
I3K S4F

DESCRIPTION	PRICE	TX
FOR PERIOD 1992 AND 1993		
MONITORING FEE FROM 23 AUGUST FOR 1 YEAR	183.60	FP

GST 0.00  
PST 0.00

HAVE A GOOD VACATION  
BE CAREFUL ON THE HIGHWAY

TOTAL : 183.60 \$

**APPENDIX G --- REPORT SAMPLES**

Page : 1

COMPANY --> CUSTOMER LIST ALARMS  
BILLING SUMMARY  
FROM 5 TO 10  
6 AUGUST 1992

NUMBER	NAME	DESCRIPTION	PRICE	RAISE	T
5	Sylvia Macintosh	MONITORING FEE	183.602.00	%	
10	Grant Inc..	MONITORING FEE	183.602.00	%	
		CONTROL O/C	122.402.00	%	
TOTAL			489.60	\$	

SECURITY INC.  
SUMMARY OF ALL PAYMENTS  
SUMMARY OF ALL LAST PAYMENTS  
From 21593 To 35934  
95-12-18

NUMBER	NAME	DESCRIPTION	PAID	PRICE	BALANCE
5	Sylvia Macintosh	MONITORING FEE	34	183.60	6242.40
10	Grant Inc.	MONITORING FEE	59	175.00	10325.00
TOTAL					16567.40

APPENDIX G --- REPORT SAMPLES

---

SECURITY INC.  
DETAILED LIST OF EVENTS

DATE	TIME	CODE AND DESCRIPTION
THU 95-12-14	08:35	92 > Open Sergey Turkov (unscheduled)
	08:35	Tel. no \ 333-4455 \ for few hours (23)
	08:36	Exit delay until 18:00 (23)
FRI 95-12-15	17:25	42 > Close by Sergey Turkov
	22:19	32 > Break in side door
	22:19	Tel no \ 333-4455 \ No answer (14)
	22:20	Police \ 280-2121 \ # 345342 (14)
	22:21	Chris Dow \ 222-4433 \ Not on site (14)
	22:21	*** END OF ACTION (14)
	22:43	91 > Open Brian Tobin (unscheduled)
	22:44	Tel No\ 333-4455 \ after alert (14)
	22:46	*** END OF ACTION (14)
		COMMENT: M. Tobin tells me false alert again. Asks for service call.
	22:43	72 > RESET
	22:50	41 > Close by D Regan

APPENDIX G --- REPORT SAMPLES

---

SECURITY INC.  
SUMMARY EVENTS

95-07-09

Date	Time	Code and Definition
95-07-01	17:55	95 Opening by Albert Landing
	17:19	40 Closing by Albert Landing
95-07-02	07:46	91 Opening by Sylvia Landing
	17:52	41 Closing by Sylvia Landing (not scheduled)
95-07-03	07:59	92 Opening by Misha Federov
	17:01	42 Closing by Misha Federov
95-07-03	07:14	95 Opening by Albert Landing
	17:28	42 Closing by Misha Federov
95-07-05	08:35	92 Opening by Misha Federov (not scheduled)
	17:00	42 Closing by Misha Federov
	22:19	32 Break in
	22:38	72 Reset
	22:38	95 Opening by Albert Landing (not scheduled)
	22:42	40 Closing by Albert Landing (not scheduled)
95-07-07	10:19	0 Opening by Albert Landing (not scheduled)
	12:03	40 Closing by Albert Landing (not scheduled)
	13:27	91 Opening by Sylvia Landing (not scheduled)
	16:18	41 Closing by Sylvia Landing (not scheduled)

95-07-09

---

APPENDIX I --- SAMM UTILITY TOOLS

---

APPENDIX H --- RUNTIME ERRORS

From Turbo Pascal V7.0 programmer's reference manual

Certain errors at run time cause the program to display an error message and terminate

Run-time error nnn at xxxx:yyyy

where nnn is the run-time error number, and xxxx:yyyy is the run-time error address ( segment and offset ).

The run-time errors are divided into four categories : DSS errors ( 1 to 99 ), I/O errors ( 100 to 149 ), Critical errors ( 150 to 199 ) and fatal errors ( 200 to 255 ).

DOS ERRORS ( 1 to 99 )

1	Invalid function number	153	Unknown command
2	File not found	154	CRC error in data
3	Path not found	155	Bad drive request structure length
4	Too many open files	156	Disk seek error
5	File access denied	157	Unknown media type
6	Invalid file handle	158	Sector not found
12	Invalid file access code	159	Printer out of paper
15	Invalid drive number	160	Device write fault
16	Cannot remove current directory	161	Device read fault
17	Cannot rename across drives	162	Hardware failure

18 No more files

I/O ERRORS ( 100 to 149 )

100	Disk read error
101	Disk write error
102	File not assigned
103	File not open
104	File not open for input
105	File not open for output
106	Invalid numeric format

CRITICAL ERRORS (150 to 199 )

150	Disk is write protected
151	Unknown unit
152	Drive not ready

FATAL ERRORS ( 200 to 255 )

200	Division by zero
201	Range check error
202	Stack overflow error
203	Heap overflow error
204	Invalid pointer operation
205	Floating point overflow
206	Floating point underflow
207	Invalid floating point operation
208	Overlay manager not installed
209	Overlay file read error
210	Object not initialized
211	Call to abstract method
212	Stream registration error
213	Collection index out of range
214	Collection overflow error
215	Arithmetic overflow error

IMPORTANT NOTE : As far as S.A.M.M. is concerned, the most common errors are 100 and 103. Other error messages are given as information only and may indicate a hardware and/or operating system problem ( hard disk problem, memory problem, corrupted files, disk affected by a virus, etc. ).

When you are reporting a RUN-TIME ERROR, please specify the complete message including the address and a complete description of the operation that was performed when the error occurred

---

APPENDIX I --- SAMM UTILITY TOOLS

---

APPENDIX I --- SAMM UTILITY TOOLS

---

CLEAN\_NO.EXE ( from within the SAMM.DTA directory )

Remove non significant zero(s) in front on account number.  
After running CLEAN\_NO.EXE, account number 0024 becomes account number 24.

Syntax : CLEAN\_NO

---

CLRCED.EXE ( from within the SAMM.DTA directory )

Remove "ghost" schedule for non existing account number.

Syntax : CLRCED XXXX where XXXX is the account number

---

COM.EXE ( from any directory or disk)

Enable you to see incoming signals on serial ports ( COM1 to COM4 ).

The screen is divided in four windows showing the 4 communication ports. Pressing 1,2,3 or 4 will acknowledge incoming signals ( one by one ) on COM1, COM2, COM3 or COM4 respectively. Pressing A will acknowledge all signals. COM is not using the IRQ at all. An IRQ conflict may exist in your PC even if the COM utility shows incoming signals.

Syntax : COM

COM 23 will skip over COM2 and COM3 ( the windows will be shown but there will be no data going through.

COM P Copy of received data will be sent to LPT:1

COM 1P Skip COM1 and send data to LPT:1

---

COMIRQ.EXE ( from any directory or disk)

Same as COM.EXE except that it displays only one COM port at the time using a specific IRQ. Signals are displayed only if the specified COM and IRQ are free. If no signals are displayed, change COM port address and/or IRQ number and try again.

Syntax : COMIRQ X,Y where X = COM1 to COM4 and Y= IRQ #

Example : COMIRQ 3,5 will check COM3 and IRQ5

---

DELCODE.EXE ( from within the SAMM.DTA directory )

Use to delete alarm codes that do not belong to a specific account number.

Syntax : DELCODE 1234 will delete alarm codes that do not belong to account number 1234. Alarm codes for account 1234 must be re-enter.

---

FIXCODE.EXE ( from within the SAMM.DTA directory )

FIXUSER.EXE ( from within the SAMM.DTA directory )

Syntax : FIXCODE 1234 will fix codes that are entered in the account number 1234 but that do not appear in the code list.

Syntax : FIXUSER 1234 will fix users that are entered in the account number 1234 but that do not appear in the user list

---

FIXATST.EXE ( from within the SAMM.DTA directory )

---

**APPENDIX I --- SAMM UTILITY TOOLS**

---

Remove "ghost" AUTOTEST for non existing account number.

Syntax : FIXATST XXXX where XXXX is the account number

---

INDCLI.EXE ( from within the SAMM.DTA directory )

Use to re-index the customer database.

Syntax : INDCLI

---

INDCODE.EXE ( from within the SAMM.DTA directory )

Use to re-index the alarm code database.

Syntax : INDCODE

---

INDPER.EXE ( from within the SAMM.DTA directory )

Use to re-index the events database.

Syntax : INDPER YYYYMM where YYYY = year MM = month

INDPER 199902 will re-index the period of February 1999

---

INIMLR.EXE ( from any directory or disk)

For firmware 3.8.0 and below. Firmware 3.8.1 and above, use INITPLUS.EXE

Use to configure the TLR+ or SA-TLR+ in SurGuard emulation.

Consult your TLR+ and SA-TLR+ user manual more information.

Syntax : INIMLR

INIMLR 23A will skip over serial port 2, 3 and A

---

INITLR.EXE ( from any directory or disk)

For firmware 3.8.0 and below. Firmware 3.8.1 and above, use INITPLUS.EXE

Use to configure the TLR+ or SA-TLR+ in Native or Ademco 685 emulation. Consult the your TLR+ and SA-TLR+ user manual more information.

Syntax : INITLR

INITLR 23A will skip over serial port 2, 3 and A

---

INITPLUS.EXE ( from any directory or disk)

For firmware 3.8.1 and above. For firmware prior to version 3.1.8 use either INITLR.EXE or INIMLR.EXE

Use to configure the TLR+ or SA-TLR+ in Native, Ademco 685 or SurGuard emulation. Consult the your TLR+ and SA-TLR+ user manual more information.

Syntax : INITPLUS

INITPLUS 23A will skip over serial port 2, 3 and A

---

KEYSAMM.EXE ( from within the SAMM.DTA directory )

For SAMM version 8.1.24 and above. SAMM version prior to 8.1.24 must use ULSAMM.EXE

Use to unlock a demo or an existing version of SAMM to a superior level. After payment and based on the data provided we will give you an Access Code.

Syntax : KEYSAMM

---

MAJAT81.EXE ( from within the SAMM.DTA directory )

---

**APPENDIX I --- SAMM UTILITY TOOLS**

---

Use to upgrade to AUTOTEST database when upgrading from version 7.6 to 8.1

Syntax : MAJAT81

---

MAJDEM.EXE ( from within the SAMM.DTA directory )

Use to upgrade to step action database when upgrading from version 7.6 to 8.1

Syntax : MAJDEM

---

MAJEVT81.EXE

Use to upgrade the event database when upgrading from version 7.6 to 8.1

Syntax : MAJEVT81 YYYYMM where YYYY = year MM = month

MAJEVT81 199902 will update the event files for the period of February 1999

---

MAJINS81.EXE ( from within the SAMM.DTA directory )

Use in the process of upgrading from version 7.6 to 8.1

Syntax : MAJINS81

---

PC685.EXE ( from any directory or disk)

For TLR only. For TLR+, use RACK24.EXE

Use to retransmit signals ( from TLR receiver card ) to an other computer via the COM1 port. It emulates an Ademco 685 for the data being transfered.

Defaults parameters are : NO parity, 8 bits, 1 stop bit

Commands : alt-Q to exit T for system test

Syntax : PC685 N where N is teh baud rate for COM1

0 = 9600 1 = 4800 2 = 2400

3 = 1200 4 = 600

Example : PC685 3 will transfer output to COM1 at 1200 bauds

---

RACK24.EXE ( For TLR+ receiver card only )

Must be installed in a directory called RACK (in your root directory)

Application to turn a PC into a full Multi Line Alarm Receiver with retransmit capability. Rack mode will not support COM port address for the TLR+ lower than COM5

Syntax : RACK 1 will retransmit data on COM1

---

RAZSAMM.EXE

To be executed when you get the following error message trying to start SAMM

BUSY BY AN OTHER OPERATOR

This could be caused by an abnormal exit of some sort or that you are attempting to access a locked file already being used by an other operator in a multi user version.

Syntax : RAZSAMM

---

APPENDIX I --- SAMM UTILITY TOOLS

---

---

RESETAT.EXE

Reset all AUTOTEST pointers to the current time of the PC. All AUTOTEST check will restart counting from that time.

Syntax : RESETAT

---

SETTLR.EXE

Use to configure the TLR in Native or Ademco 685 emulation.

Syntax : SETTLR will set TLR in Native mode, default options  
SETTLR 685THYER Set TLR in Ademco mode, all options

Selectable options :

685 =	Ademco 685 mode	default is: Native mode
T =	TLR answers after 2 rings	default is: 1 ring
H =	Heartbeat in Native mode	default is: no heartbeat
E =	Compressed extended 3x1 or 4x1	default is: not compressed
R =	Zero removed in 3x1 and 4x1	default is: insert zero
Y =	Date including year	default is: TLR only sends month and day
P =	Printer on TLR port	default is: TLR does not verify printer on TLR printer port.

Consult your TLR user manual for detailed information on how to use these options.

---

TFTSAMM.EXE

Use to transfer Group files to or from a diskette

Syntax : TFTSAMM

---

ULSAMM.EXE

Same as KEYSAMM.EXE but for version prior to 8.1.24  
For version 8.1.24 and above, use KEYSAMM.EXE

Syntax : ULSAMM

---

VALID.EXE

Use to re-activate an account number that you know exist but cannot be accessed

Syntax : VALID XXXX where XXXX is the account number to re-activate

---

END